

KØKKENHEF



INSTRUCTION MANUAL RECHARGEABLE JUICER

10675988

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



PRODUKTBESKRIVELSE

Produktdele




Låg



Saftkegle

Kontakt

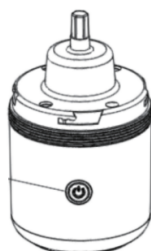


Kabinet




Gennemsigtigt låg

Nøgle

USB-kabel

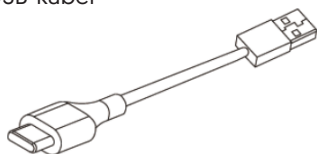

BETJENINGSVEJLEDNING

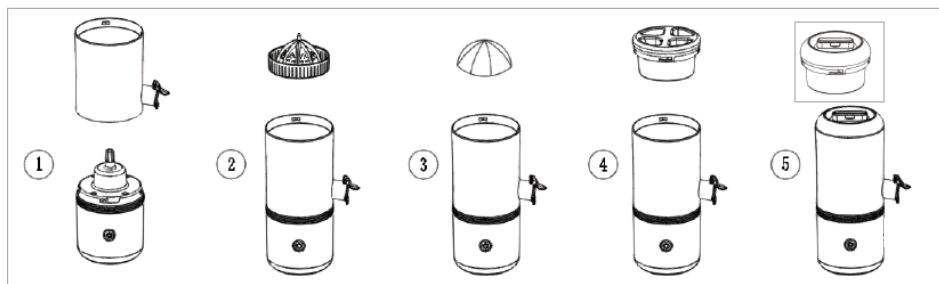


1. Flugt den gennemsigtige beholder med rillen, og sæt den ind i kabinettets gennemsigtige beholder. Vend den mod kontakten, og drej den på plads med uret.
2. Anbring saftkeglen i den gennemsigtige beholder. Sørg for, at den sekskantede aksel passer ind i det tilsvarende sekskantede hul.
3. Skær appelsinerne i halve stykker, og tryk appelsinkødet mod saftkeglen på saftpresseren.
4. Sæt låget på den gennemsigtige beholder, og drej det med uret.
5. Sæt en kop til saften under saftudløbet, og tryk derfor på kontakten for at starte. Tryk

på knappen i 1 sekund for at tænde apparatet. Saftkeglen begynder at rotere nedad og udløser kontakten for lav tur. Den roterer derefter langsomt til toppen af kabinettet, udløser kontakten for høj tur og kører derefter ned igen. Rotationen stopper efter ca. 1 sekund. Åbn saftudløbet. Juicen løber ned i koppen, og du kan nyde din drik.

6. Gentag trin 3-5 for at lave mere juice.
7. Du kan i alle tilstande trykke på kontakten i 2 sekunder for at slukke apparatet. Apparatet slukker automatisk efter 5 minutters inaktivitet.

FORHOLDSREGLER VED OPLADNING

Kontrollér batteriniveauet før brug. Hvis batteriniveauet er lavt, og apparatet bruges for første gang, skal du oplade batteriet før brugen.

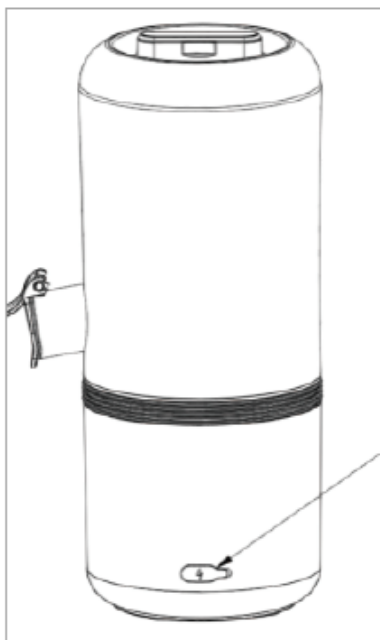

Opladningsspecifikationer: USB Type-C med 5 V og 1 A. Den røde kontrollampe tændes eller blinker, når batteriniveauet er lavt. Fjern silikonedækslet til USB-porten, sæt Type-C-stikket i apparatets opladningsport, og slut det til strømforsyningen for at starte opladningen. Kontrollampen lyser rødt under opladningen. Når kontrollampen lyser konstant rødt (efter ca. 3,5-4 timer), skal du afbryde strømforsyningen. og sætte silikonedækslet på USB-porten igen.

Kontakten er aktiv under brugen. Apparatet slukker automatisk efter 5 minutters inaktivitet. Oplad apparatet hver anden måned, hvis det ikke skal bruges i længere tid. Du skal bruge en adapter til apparatet med en maksimal effekt på højst 15 W.

FEJLFINDING

Fejl	Årsag	Løsning
Virker ikke.	Dødt batteri	Oplad straks batteriet
Stopper pludselig.	1. Frugtdelene er for store. 2. Batteriet er dødt. 3. Ingredienserne er for hårde og blokerer apparatet.	1. Skær frugterne i mindre stykker. 2. Oplad straks batteriet. 3. Fjern hårde ingredienser.
Støjer unormalt.	1. Tilbehøret er ikke korrekt installeret. 2. Apparatet står ikke på en plan overflade under brugen.	1. Stand apparatet, og kontrollér, at tilbehøret er korrekt installeret. 2. Placér apparatet på en plan overflade. Kontrollér, at apparatet er samlet korrekt, hvis problemet bliver ved.
Saften løber over under presningen.	1. Nogle frugter indeholder meget saft, eller der er lagt for meget frugt i saftpresseren. 2. Kontrollér, at toplåget er sat på.	1. Normal drift. 2. Sørg for, at toplåget er installeret korrekt.
Kontrollampe: 1. Kontrollampen blinker rødt i ca. 10 sekunder. 2. Kontrollampen lyser ikke under opladningen. Kontrollampen blinker rødt i 5 sekunder, og apparatet stopper.	1. Batteriet er dødt. Den automatiske beskyttelse er udløst. 2. Opladningskablet er ikke tilsluttet. 3. Beskyttelse mod fastkørsel	1. Tilslut opladningskablet for at oplade. 2. Tryk længe på kontakten for at nulstille apparatet. Fjern frugterne, og frigør den låste rotor.

RENGØRING OG OPBEVARING

1. Motorkabinettet må ikke komme i kontakt med vand. Undgå rengøring med vand, og tør i stedet kabinettet af med en blød, fugtig klud. Rengør låget til beholderen, saftkeglen og den gennemsigtige beholder før og efter brugen. Delene kan lægges i opvaskemaskinen. Når du bruger varmt vand, skal du sørge for, at temperaturen ikke overstiger 60 °C. Kontrollér saftkeglen for blokeringer og snavs. Fjern eventuelle blokeringer og snavs før brugen.
2. Sørg for, at apparatet under brugen er placeret vandret på en flad overflade såsom en skranke eller et bord.
3. Brug frugt i passende størrelse for at undgå, at låget ikke kan lukkes.
4. Kontrollér, at alt tilbehør er korrekt installeret før brugen af apparatet.
5. Saftkeglen roterer langsomt opad under brugen, og lidt støj og vibration er normalt.
6. Sørg for at lukke hanen, før du slutter saftpresseren til stikkontakten for at undgå at spilde.
7. Undgå, at saften overstiger maksimumsmarkeringen i den gennemsigtige beholder for at undgå, at saften løber over under tilberedningen.

TEKNISKE DATA

Artikelnr. 10675988

Opladningsspænding:

Jævnstrøm på 5V, 1A

Nominal spænding: Jævnstrøm
på 7,4V

Effekt: 40 Watt

PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Danmark

www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL


Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally

friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:




PRODUCT INTRODUCTION

Product components

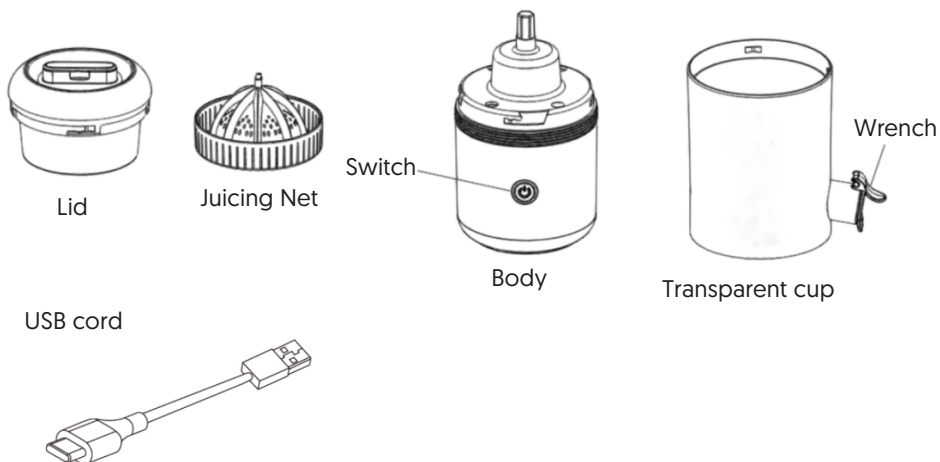

PRODUCT OPERATION INSTRUCTION

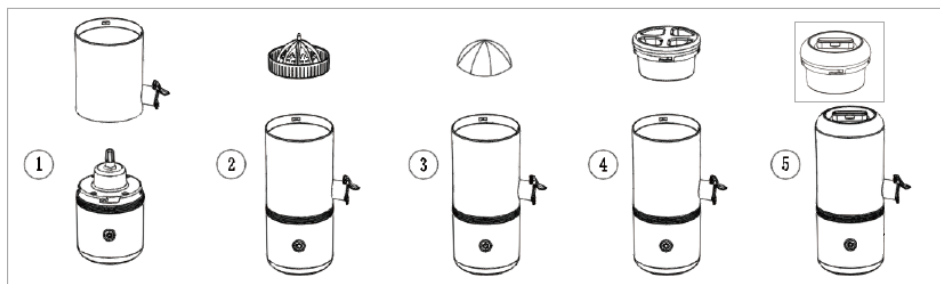


1. Align the transparent cup with the groove and insert it into the host's transparent cup. Facing the switch button, rotate it clockwise into place.
2. Put the juicer net into the transparent cup, the hexagonal column into the hexagonal hole.
3. The orange to be processed is cut in half, and the pulp part is pressed towards the juicer net on the citrus juicer.
4. Put the lid at the buckle into the transparent cup and rotate it in a clockwise direction.
5. Prepare the juice cup on the juice outlet, press the switch machine can be processed,

long press the on/off key for 1 second,the machine is on, the juice net will first spin downward, when triggered to the lower trip switch, the juice net will rotate and slowly rise until the top of the host of the upper trip switch and then again down to trigger the lower trip switch, and then up for about 1 second after the cessation of; At this point, open the juice wrench and the juice will flow into the cup, then you can drink the juice!

6. Repeat action 3.4.5 to juice again;
7. In any state, long press the on button for 2 seconds to shut down, and the machine will automatically shut down after 5minutes of inactivity.

CHARGING PRECAUTIONS

Please confirm the battery level before use. If the power is low. If the machine is the first time, please use it again.

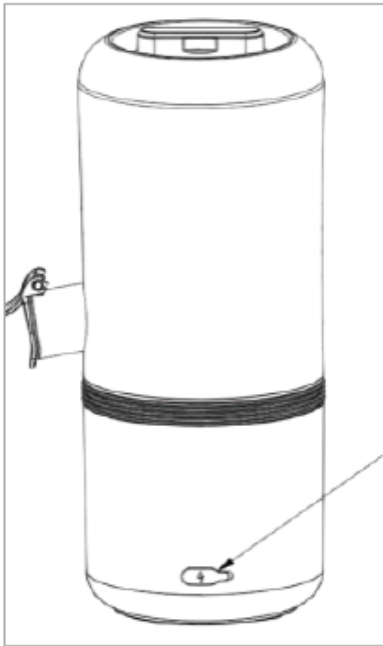

Charging Specification:5V== 1A USB Type C.When the battery is low, the red light is always on or often out; remove the USB silicone above, Type C plug in the machine charging port and connect the power supply and the red light is charging; when the red light is always on [about 3.5-4 hours], disconnect the power supply and cover the USB silicone. The switch button is always on when the machine is working; if the machine is stopped for 5 minutes, the machine will automatically turn off the power. If the machine is not used for a long time, please charge it once every two months.

This device needs to be used with an adapter that provides a maximum output power of no more than 15W.

ERROR ANALYSIS

Phenomenon	Reason	Solutions
Can't work	Dead battery	Charge in time
Stop suddenly	1. The fruit is too big. 2. The battery is down. 3. The ingredient is too hard and jam the machine.	1. Cut small pieces of fruit. 2. Charge in time. 3. Take out the hard ingredients.
Abnormal noise	1. Accessories are not installed in place. 2. The machine is placed in an incline position when working.	1. Stop the machine and check whether the accessories are installed correctly and in place. 2. Please put the machine on a level surface for use. Confirm whether the machine is well assembled. If it's not the assembly problem, stop using it.
There is food overflow when working	1. Some fruits contain more water or put too much fruit. 2. Confirm whether the upper cover is covered.	1. It is normal. 2. Install the upper cover correctly.
Indicator light: 1. After the red light flashes is on for about 10 seconds. 2. Indicator light when charging not bright The red light flashes for 5 seconds and the machine stops	1. The battery is dead, automatic protection. 2. The charging cable is not connected. 3. Stall protection	1. To charge. 2. Connect the charging cable. 3. Long press the switch button to reset the machine, take out the fruit, and release the locked rotor.

5.CLEANING AND STORAGE

1. The main engine should not enter the water, do not clean with water, wipe with a soft wet cloth. Before use / after use, please clean the cup lid / juicer net / transparent cup, you can use the dishwasher, when using hot water, the temperature should not exceed 60°C. Check whether the juice mesh is blocked or dirty, if yes, remove and clean before use.
2. Machine processing must be placed in a horizontal and flat place, such as desktop or table.
3. The fruit should not be too big, otherwise the lid should not be covered;
4. Before starting the machine, please confirm that the accessories are installed in place.
5. When the machine is processed, the juicer net will rotate and slowly rise, and a certain noise and vibration is normal phenomenon.
6. Please pay attention to close the mouth out, to connect the juice to open.
7. The juice shall not exceed the maximum MAX scale of the clear cup without the risk of overflow.

TECHNICAL DATA

Article No. 10675988

Charging voltage: DC5V, 1A

Rated volatage: DC7.4V

Power: 40 Watt

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing errors.