

sallling



INSTRUCTION MANUAL

5-IN-1 AIR STYLER

10958536

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.


BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



OVERBLIK

Læs følgende anvisninger omhyggeligt for at sikre, at du får mest muligt ud af dit kvalitetsprodukt:

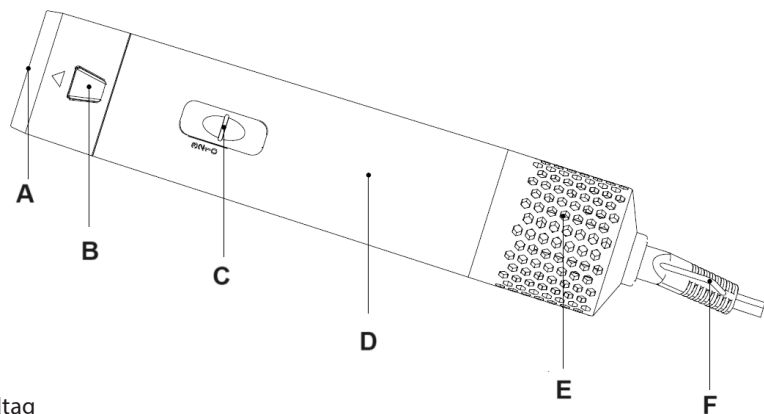

- A. Luftudtag
- B. Knap til oplåsning
- C. Kontakt
- D. Kabinet
- E. Luftindtag
- F. Ledning

TILBEHØR:



- 1. Højre automatiske krøllestav
- 2. Venstre automatiske krøllestav
- 3. Hårtørrerdyse til præ-styling
- 4. Glattebørste
- 5. Rund volumenbørste

SKIFT AF STYLINGTILBEHØR



ADVARSEL: VENT, INDTIL TILBEHØRET ER KØLET AF, FØR DET SKIFTES.

ADVARSEL: LAD STYLEREN KØRE PÅ LAV VARME (INDSTILLING 1) I 20 SEKUNDER, OG LAD DEN KØLE AF, FØR DU SKIFTER TILBEHØR.



- Flugt ● på tilbehøret med ▲ på kabinettet for at fastgøre hårtørrerdysen til stylerens kabinet. Drej tilbehøret mod uret, indtil pilene flugter med hinanden, og der lyder et klik.
- Når du skal fastgøre andet tilbehør til kabinettet, skal du sætte det på kabinettet og dreje det mod uret, indtil pilene flugter med hinanden, og der lyder et klik.
- Tryk på knappen, der er mærket SKUB ▲, for at låse op, og drej tilbehøret med uret for at fjerne tilbehøret. Træk forsigtigt tilbehøret af.

SÅDAN BRUGES APPARATET

1. Vask håret, tør det med et håndklæde, og red håret for at få det bedste resultat.
2. Træk ledningen helt ud, og sæt apparatet i en egnet stikkontakt.
3. Skub kontaktknappen til stillingen ON, og indstil det ønskede temperaturniveau:
 - 0: Off
 - 1. Kold luft til styling af hår med en finish, der holder længe
 - 2. Moderat varme til skånsom tørring og styling
 - 3: Høj varme til hurtig tørring og styling
4. Lav styling på dit hår (se stylingguiden).
5. Vent, indtil håret er køligt, før du styler yderligere.
6. Sluk styleren, træk stikket ud af stikkontakten, og lad apparatet køle helt af før rengøring og opbevaring.


STYLINGGUIDE

Hårtørrerdyse til præ-styling

Designet med en bred luftstrøm for nem tørring af håret som en forberedelse til styling.

FORBEREDELSE:

Det anbefales, at du vasker håret, tørrer det med et håndklæde og reder håret.

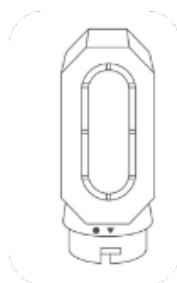

TEMPERATURINDSTILLINGER:

Indstil til 2-3.

SÅDAN STYLER DU:

Tør håret med hårtøreren ved den valgte temperatur, idet du starter ved rødderne og bevæger dig ud mod spidserne, indtil du når det ønskede fugtighedsniveau og/eller style.

AUTOMATISKE KRØLLESTAVE PÅ 30 MM

Giver fyldige og bløde krøller.

FORBEREDELSE:

Håret skal være 80-90 % tørt.

TEMPERATURINDSTILLINGER:

Indstil til 3.

Venstre stav (krøller snoet mod uret) – Anbefales til venstre side af hovedet.


Højre stav (krøller snoet med uret) – Anbefales til højre side af hovedet.



SÅDAN STYLER DU:

1. Tør håret, og del det ind i sektioner.
2. Tag en sektion med hår, og hold enderne mod stylingstaven.
3. Tænd stylingstaven, og indstil den til indstilling 3.
4. Lad stylingstaven automatisk sno enderne af håret rundt om staven. Slip derefter håret.
5. Løft langsomt stileren op til rødderne. Lad håret sno sig rundt om staven.
6. Hold stille i 8-10 sekunder eller indtil tørt.
7. Sæt stylingen med lav varme i 5-10 sekunder.
8. Tag forsigtigt håret af staven.
9. Gentag processen for resten af dit hår.
10. Sluk stileren.
11. Lad håret køle af før styling.

GLATTEBØRSTE

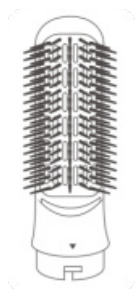

Designet til at fjerne filtret hår og reducere krøller samt statisk elektricitet, så håret får en blank og skinnende finish.


FORBEREDELSE: Håret skal være 80 % tørt.

TEMPERATURINDSTILLINGER: Indstil til 2.

SÅDAN STYLER DU:

1. Tør håret, og del det ind i sektioner.
2. Indstil styleren til indstilling 2.
3. Placer børsten under en sektion af håret, og børst forsigtigt fra rødderne til spidserne.
4. Gentag processen for resten af håret.
5. Sluk styleren.
6. Lad håret køle af før styling.

RUND VOLUMENBØRSTE

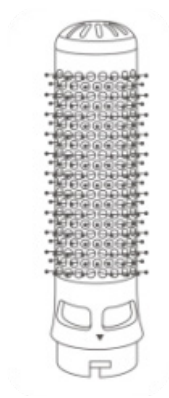

Skaber en glat, fyldig tekstur i håret.

FORBEREDELSE: Håret skal være 80-90 % tørt.

TEMPERATURINDSTILLINGER: Indstil til 2.

SÅDAN STYLER DU:

1. Tør håret, og del det ind i sektioner.
2. Tag en hårlok, og placér volumenbørsten under håret i nærheden af rødderne.
3. Indstil stycleren til indstilling 2.
4. Placér volumenbørsten ved rødderne, og rul den udad fra rødderne til spidserne af håret.
 - Børst håret opad for at få mere fylde.
 - Drej børsten ved spidserne for at få flere krøller.
5. Gentag processen for resten af håret.
6. Sluk stycleren.
7. Lad håret køle af før styling.

RENGØRING OG VEDLIGEHOLDELSE

1. Træk altid ledningen til apparatet ud af stikkontakten, og lad det køle helt af før rengøringen.
2. Skyl ikke apparatet med vand.
3. Læg ikke apparatet eller tilbehøret ned i væske.
4. Brug ikke slibende væsker eller rengøringsmidler.
5. Tør apparatet med en fugtig, ren klud. Tør det derefter af med en blød, tør klud.
6. Brug ikke direkte varme for at tørre apparatet.

TEKNISKE DATA

Artikelnr. 10958536
220-240V~, 50/60Hz
Effekt: 1000 Watt
3 Varmeindstillinger
BLDC-motor

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL


Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



OVERVIEW

Please read the following instructions carefully to ensure you get the most out of your quality product:

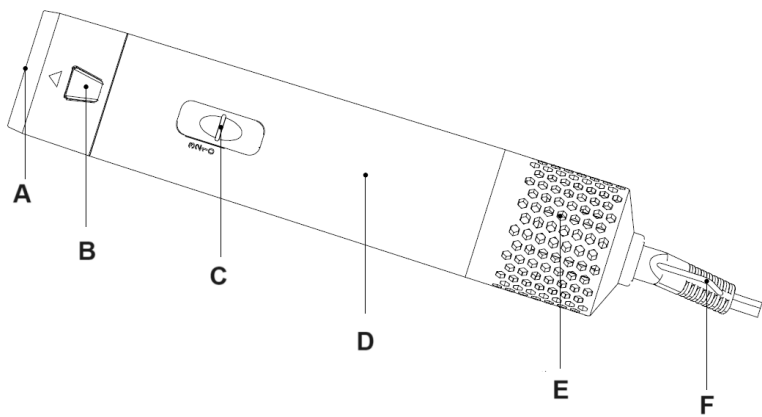

- A. Air Outlet
- B. Unlocking Button
- C. Switch
- D. Machine Body
- E. Air Inlet
- F. Power Cord

ATTACHMENT :



- 1. Right Automatic Curling Barrel
- 2. Left Automatic Curling Barrel
- 3. Pre-Styling Blow Dryer Nozzle
- 4. Straightening Brush
- 5. Round Volumizing Brush

CHANGING THE STYLING ATTACHMENT



WARNING: WAIT FOR THE ATTACHMENT TO COOL DOWN BEFORE CHANGING.

WARNING: BEFORE CHANGING THE ATTACHMENT, RUN THE STYLER ON LOW HEAT (setting 1) FOR 20 SECONDS AND ALLOW IT TO COOL DOWN.



- To attach the blow dry nozzle to the body of the styler, align the ● on the attachment with the ▲ on the body. Turn the attachment counterclockwise until you hear a click and the arrows align.
- To attach the other attachments to the body of the styler, insert the attachment onto the body and turn it counterclockwise until you hear a click and the arrows align.
- To remove the attachment, press the unlocking button labeled PUSH ▲ and turn the attachment clockwise. Gently pull the attachment off.

HOW TO USE

1. For the best results, wash, towel dry, and detangle your hair.
2. Fully unwind the cable and plug the appliance into a suitable mains socket.
3. Push the switch button to ON and set the desired temperature level:
 - 0: Off
 - 1: Cold air for setting hair styles and creating a longer-lasting finish
 - 2: Moderate heat for gentle drying and styling
 - 3: High heat for fast drying and styling
4. Style your hair (see styling guide).
5. Wait for the hair to cool before styling further.
6. Switch off the styler, unplug it from the mains socket, and allow it to cool down completely before cleaning or storing.

STYLING GUIDE

Pre-styling Blow Dry Nozzle

Designed with a wide air stream to easily dry hair, preparing it for styling.

PREPARATION:


It is recommended to wash, towel dry, and detangle your hair.

TEMPERATURE SETTINGS:

Set to 2-3.

HOW TO STYLE:

Blow dry the hair at the chosen temperature, starting from the roots and working your

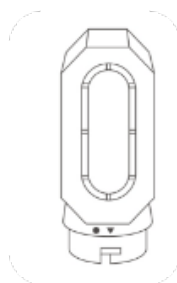

way to the ends, until you reach the desired moisture level and/or style.

30MM AUTOMATIC CURLING BARRELS

Creates voluminous and soft curls.

PREPARATION:

Hair should be 80-90% dry.

TEMPERATURE SETTINGS:

Set to 3.

Left Barrel (counter-clockwise curl) - recommended for the left side of the head.


Right Barrel (clockwise curl) - recommended for the right side of the head.



HOW TO STYLE

1. Pre-dry hair and divide it into sections.
2. Take a section of hair and hold the ends towards the styling wand.
3. Turn on the styling wand and set it to setting 3.
4. Allow the styling wand to automatically wrap the ends of your hair around the barrel, then release your hair.
5. Slowly bring the styler up to the roots, allowing the hair to wrap itself around the barrel.
6. Hold in place for 8-10 seconds, or until dry.
7. Set the style with low heat for 5-10 seconds.
8. Gently release the hair from the barrel.
9. Repeat the process for the rest of your hair.
10. Turn off the styler.
11. Let hair cool down before styling.

STRAIGHTENING BRUSH

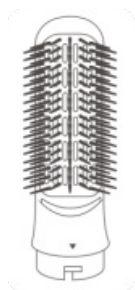

Designed to detangle and reduce frizz and static, leaving the hair with a polished and shiny finish.


PREPARATION: Hair should be 80% dry.

TEMPERATURE SETTINGS: Set to 2.

HOW TO STYLE:

1. Pre-dry hair and divide it into sections.
2. Switch the styler on to setting 2.
3. Place the brush under a section of hair and gently brush from roots to ends.
4. Repeat the process for the rest of the hair.
5. Turn off the styler.
6. Let the hair cool down before styling.

ROUND VOLUMIZING BRUSH

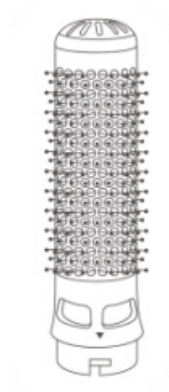

Creates a smooth, voluminous texture in the hair.

PREPARATION: Hair should be 80-90% dry.

TEMPERATURE SETTINGS: Set to 2.

HOW TO STYLE:

1. Pre-dry hair and divide it into sections.
2. Take a section of hair and place the volumizing brush under the hair near the roots.
3. Switch the styler on to setting 2.
4. Place the volumizing brush at the roots and roll it outwards from the roots to the ends of the hair.
 - For added volume, brush the hair upwards.
 - For added curls, twist the brush at the ends.
5. Repeat the process for the rest of the hair.
6. Turn off the styler.
7. Let the hair cool down before styling.

CLEANING AND MAINTENANCE

1. Always unplug the device and allow it to cool down completely before cleaning.
2. Do not rinse the appliance with water.
3. Do not submerge the unit or attachments in liquid.
4. Avoid using abrasive liquids or detergents.
5. Wipe the unit with a damp, clean cloth, then dry thoroughly with a soft, dry cloth.
6. Do not use direct heat to dry the appliance.

TECHNICAL DATA

Article No. 10958536
220-240V~, 50/60Hz
Power: 1000 Watt
3 Heat Settings
BLDC Motor

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.