

KØKKENHEF



INSTRUCTION MANUAL
KETTLE

10482703

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må kun anvendes sammen med medfølgende base.
- Undgå at spilde vand på basen.
- Overstigning af max vandstand kan forårsage udskydning af kogende vand.
- Fjern ikke låget mens vandet koger.
- På modeller med aftageligt låg, skal man sørge for at låget sidder korrekt så evt. damp ledes væk fra håndtaget.
- Varmelegemet kan være meget varmt efter brug grundet restvarme.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været

tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.

- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.


REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



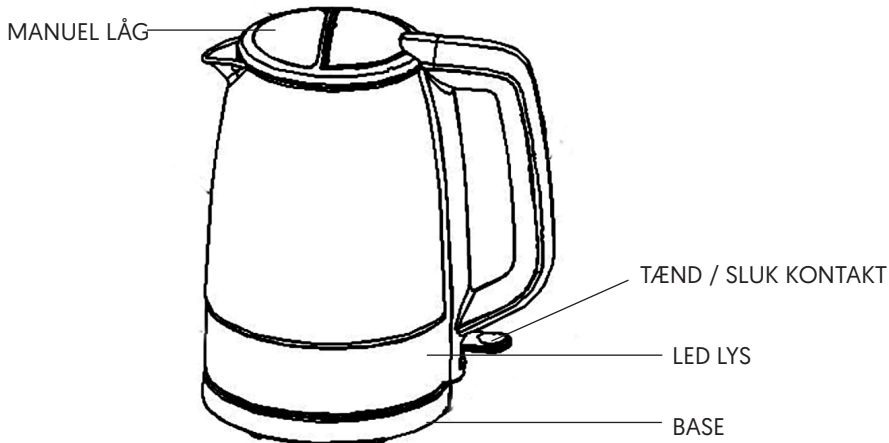

SÅDAN BRUGES DEN

- Fjern al emballage fra kedlen og strømbasen før brug.
- Sørg for at strømafbryderen er sat til "OFF" og el-kablet fjernet fra kedlen, og så fyld så kanden med vand som ønsket. Fyld den ikke over MAX-markeringen. (Den første gang kedlen bruges, eller hvis den ikke været brugt i lang tid, anbefales det, at kedlen rengøres, fyldes til maksimum og koger. Vandet skal derefter kasseres, kedlen skylles og genopfyldes med koldt vand.)

ADVARSEL: Hvis kedlen er overfyldt, er der en risiko for, at kogende vand kan løbe over gennem hældetuden.

- Sørg for at kedlen er i "OFF"-position [kontakt op] og tilslut el-kablet til et strømstik med samme volt og frekvens som angivet på produktets identifikationsplade.
- For at få kedlen til at varme, så skift kontakten til "ON"-position [kontakt ned]. Strømindikator-lyset vil lyse op.
- Når vandet er kogt, skifter kedlen til "OFF". Hvis nødvendigt, kan vandet bringes i kog igen ved at sætte kontakten til "ON".
- Kedlen kan når som helst slukkes ved at sætte kontakten på håndtaget til "OFF".

VIGTIGT

Gør det til en vane at slukke på strømkontakten, før ledningen til kedlen tages fra.

- Brug ikke varmt vand fra hanen til at fylde kedlen. Anvend udelukkende koldt vand. Lad det kolde vand løbe i 3-4 sekunder, inden kedlen fyldes.

AUTOMATISK SIKKERHEDSAFBRYDER

Der er installeret en automatisk afbryder til at beskytte mod overophedning ifm. tørkogning. Den aktiveres hvis kedlen tændes med for lidt vand. Hvis dette sker, så sluk for kedlen og tag elkablet ud af strømstikket. Lad kedlen afkøle i 10 minutter, og fyld den så igen med koldt vand og tilslut elkablet igen.

PRODUKTPLEJE

- Undgå at benytte opløsningsmidler, slibemidler eller rengøringsmidler i sprayform, da de kan beskadige produktets overflade. Indersiden af kedlen kan rengøres ved brug af et mildt rengøringsmiddel, men den skal skylles grundigt, før den igen bruges. Rengør ydersiden af kedlen ved at aftørre den med en let fugtig klud. Sørg for at kedlen er grundigt tørret, før den igen tilsluttes elnettet.

BEMÆRK

- Nedsænk ikke kedlen i vand eller anden væske.
- Tilkalkning er et almindeligt problem i områder med hårdt vand, og det anbefales at afkalke kedlen med jævne mellemrum. For at afkalke den, så fyld kedlen med 1L vand og tilsæt 50ml eddike. Kog indholdet og lad stå i kedlen natten over. Kog det op igen dagen efter, og hæld det ud. Genopfyld derefter kedlen med frisk vand og bring i kog igen. Dette vand skal ligeledes hældes ud.

TEKNISKE DATA

Artikelnr. 10482703
220-240V~, 50/60Hz
1850-2200 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from K kkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product may only be used with the supplied base.
- Avoid spilling water on the base.
- Exceeding the maximum water level may cause boiling water to be ejected.
- Do not remove the lid while the water is boiling.
- On models with a removable lid, make sure that the lid fits correctly so that any steam is directed away from the handle.
- The heating element can be very hot after use due to residual heat.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be

inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.


RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



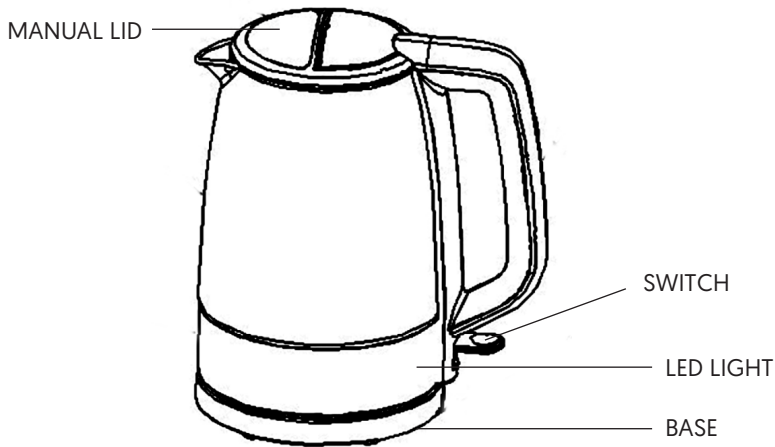

HOW TO USE

- Before first use remove all packaging materials from the kettle and power base.
- With the power switch in the “OFF” position and the power cord removed from the kettle, fill the kettle to the desired level. Do not fill above the MAX mark. (The first time the kettle is used, or it has been unused for a long period of time, it is recommended that the kettle be rinsed, filled to maximum and boiled. The water should then be discarded, the kettle rinsed and refilled with cold water.)

CAUTION: If the kettle is overfilled there is a danger that boiling water may be ejected from spout.

- Ensure the kettle is in the “OFF” position [switch up] and connect the power supply cord to a power outlet of the same voltage and frequency as detailed on the Product Identification Plate.
- To start the kettle heating, push the switch to the “ON” position [switch down]. The power indicator light will glow.
- When the water has boiled the kettle will switch “OFF”. If required, the water may be brought back to the boil by pressing the switch to “ON”.
- The kettle may be switched “OFF” at any time by pressing the switch on the handle to the “OFF” position.

IMPORTANT

Make a habit of switching the power “OFF” at the power outlet before disconnecting the power cord from the kettle.

- Do not use hot tap water to fill the kettle. Use only cold water. Allow the cold water to run for three to four seconds before filling the kettle.

AUTOMATIC SAFETY CUT-OUT

An automatic cutout is fitted for protection against boil-dry overheating. It will operate if the kettle is switched on when containing insufficient water. If this should occur, switch off and remove the power cord from the power outlet. Allow the kettle to cool for 10 minutes then refill with cold water and connect to power supply.

CARE OF YOUR PRODUCT

- Avoid the use of solvents, polish, abrasive or aerosol cleaners as they may damage surfaces of the product. The inside of the kettle may be cleaned using a mild detergent, however it must be thoroughly rinsed before re-use. Clean the exterior of the kettle by wiping with a slightly dampened soft cloth. Make sure the kettle is thoroughly dried before reconnecting to the power supply.

NOTE

- Do not immerse the kettle in water or any other liquid.
- Furring up is a common problem in hard water areas, and it is recommended to descale the kettle regularly. To descale, fill the kettle with 1L of water and add 50ml vinegar. Bring to the boil and allow to stand overnight. Next day, re-boil and pour away and refill the kettle with fresh water, and bring to the boil again. This water must also be poured away.

TECHNICAL DATA

Article No. 10482703
220-240V~, 50/60Hz
1850-2200 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.