PROSONIC



BRUGSANVISNING

MASSAGEAPPARAT TIL FØDDER OG RYG

11344395

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Prosonic. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.
Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/ elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETTEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



SIKKERHEDSANVISNINGER

Brugsbetingelser

- Brug ikke produktet i våde eller snavsede omgivelser for at forhindre funktionsfejl.
- Brug ikke produktet i rum med en temperatur på over 40 °C.
- Placér ikke, og opbevar ikke produktet udendørs.

Personer, som ikke må bruge dette produkt

Spørg din læge til råds inden brug, hvis et af følgende forhold gælder for dig:

- Du er under medicinsk behandling eller føler dig utilpas.
- Du behandles for kræft (ondartet).
- Du er gravid eller har din menstruation.
- Du lider af en akut sygdom eller er i en akut medicinsk situation.

Generelle sikkerhedsanvisninger

- Betjen ikke kontrolenheden med våde hænder.
- Tab ikke kontrolenheden på gulvet eller ned i vand.
- Træk ikke i strømkablet til kontrolenheden.
- Læg ikke tunge genstande oven på kontrolenheden.

Generelle advarsler

- Sov ikke, mens du bruger massageapparatet.
- Brug ikke produktet, mens du er beruset eller føler dig utilpas.
- Undgå at placere massagehjulet direkte på følsomme områder såsom hænder, albuer, knæ, bryst eller mave.
- Brug ikke massageapparatet konstant i mere end 30 minutter ad gangen.

Stop brugen af produktet

Stop straks brugen af produktet, og træk stikket ud af stikkontakten på grund af følgende forhold:

- Der er ved et uheld sprøjtet vand på produktet eller kontrolenheden.
- Dele er tilsyneladende beskadigede dele, eller interne dele er synlige.
- Du oplever smerte, ubehag eller unormal følelse under brugen.
- Du bemærker røg, en brændt lugt eller en usædvanlig støj eller funktionsmåde.
- Der indtræffer en pludselig strømafbrydelse.
- I tordenvejr.

Samling og vedligeholdelse af produkt


- Skil ikke selv produktet ad, og rør ikke ved produktets indvendige dele.
- Vedligeholdelse må kun udføres af autoriserede serviceteknikere.

Strømadapter

- Kontrollér, at strømadapteren matcher de krævede spændings- og strømspecifikationer.

- Hold altid i stikket og ikke i strømkablet, når du trækker stikket ud af stikkontakten.
- Læg ikke tunge genstande oven på strømkablet.

KNAPFUNKTION

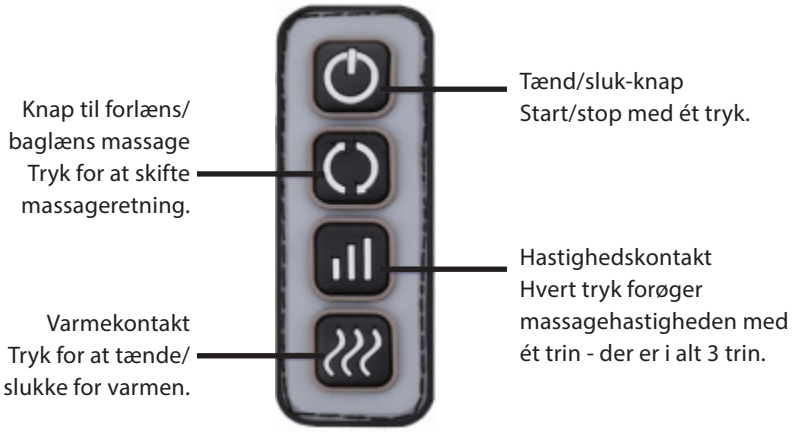

SÅDAN BRUGES APPARATET

1. Sæt kontrolenheden i stikket, og sæt derefter strømadapteren i en stikkontakt.
2. Drej kontakten til massageretningen for at starte massageprogrammet.
   (Anbefalet massagetid: 10-15 minutter pr. gang)
3. Stop ved at dreje kontakten til massageretningen til midterstillingen, og træk strømadapteren ud af stikkontakten.

SÅDAN RENGØRES

Det aftagelige foddæksel kan maskinvaskes, hold shiatsu-fodmassageapparatet rent.



OFTE STILLEDE SPØRGSMÅL OG LØSNINGER

Nr.	Fejl	Mulig årsag	Løsning
1	Når du bruger apparatet, hører du muligvis en lyd - Det betyder, at produktet fungerer normalt.	Du kan også høre en lyd, når massagekuglen glider hen over stofbetrækket.	Du skal ikke foretage dig noget.
2	Produktet tænder ikke	Produktet er for varmt (beskyttelsen mod overophedning er udløst)	Produktet er lukket automatisk ned for at undgå skader. Sluk produktet, og vent 30 minutter, før du bruger det igen.
		Strømstikket eller stikkontakten er ikke korrekt tilsluttet	Sørg for, at strømstikket er sikkert tilsluttet stikkontakten.
		Kontakten til massageretningen sidder i midterstillingen	Drej kontakten helt til venstre eller højre for at starte massageprogrammet.

TEKNISKE DATA
Artikelnr. 11344395
DC 12V 2.0A
Effekt: 24 Watt

Salling Group
Rosbjergvej 33
DK-8220
sallinggroup.com

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Prosonic. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.
Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally

friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



SAFETY INSTRUCTIONS

Usage Conditions

- Do not use the product in wet or dirty environments to prevent malfunction.
- Do not use this product in rooms where the temperature exceeds 40°C.
- Do not place or store the product outdoors.

People Who Should Not Use This Product

Please consult a doctor before using if any of the following apply:

- You are under medical treatment or feel unwell.
- You are undergoing treatment for cancer (malignancy).
- You are pregnant or menstruating.
- You have an acute illness or medical emergency.

Controller Safety Instructions

- Do not operate the controller with wet hands.
- Do not drop the controller on the floor or into water.
- Do not pull or drag the controller cable.
- Do not place heavy objects on the controller.

General Warnings

- Do not sleep while using the massager.
- Do not use the product while intoxicated or unwell.
- Avoid placing the massage wheel directly on sensitive areas such as hands, elbows, knees, chest, or abdomen.
- Do not use the massager for more than 30 minutes continuously.

When to Stop Using the Product

Immediately stop using the product and unplug it if:

- Water is accidentally splashed on the product or controller.
- Any parts appear damaged or internal components are exposed.
- You experience pain, discomfort, or abnormal sensations during use.
- You notice smoke, a burning smell, or any unusual noise or behavior.
- There is a sudden power outage.
- Thunderstorms occur.


Product Assembly & Maintenance

- Do not disassemble or touch internal parts of the product yourself.
- Maintenance should only be performed by authorized service professionals.

Power Adapter

- Ensure the power adapter matches the required voltage and current specifications.
- When unplugging, always hold the power plug—not the cable.
- Do not place heavy objects on the power cable.

BUTTON FUNCTIONS

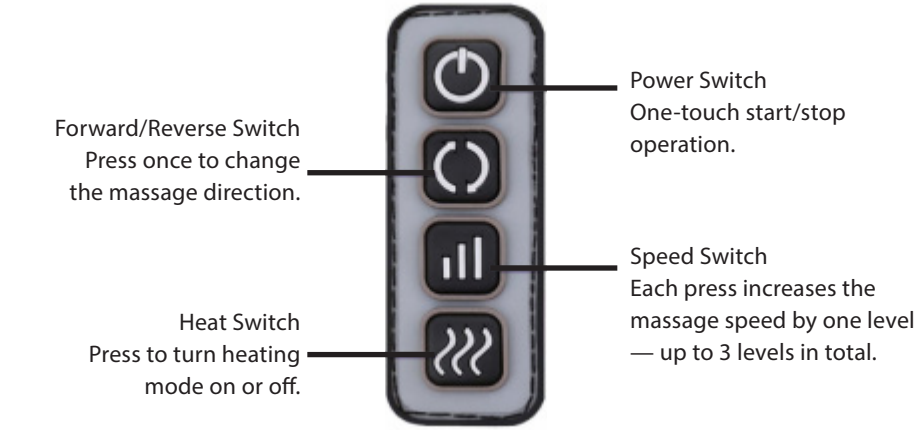

HOW TO USE

1. Plug the controller into the socket, then connect the power adapter to a power outlet.
2. Turn the direction switch to begin massage mode.
   (Recommended massage time: 10–15 minutes per session)
3. To stop, turn the direction switch to the center position and unplug the power adapter.

HOW TO CLEAN

The detachable foot cover is machine washable, keep the shiatsu foot massager clean.



FAQS & SOLUTIONS

Sequence No	Phenomenon	Possible Reason	Solution
1	When operating the app, you may hear a “xiuxiu dada” sound — this indicates that the product is functioning normally.	You might also hear a frictional sound between the massage ball and the fabric cover.	No action is needed.
2	Unable to turn on	Product too hot (overheating protection activated)	The product has shut down to protect itself. Please turn it off and wait for 30 minutes before using it again.
		Power plug or socket not properly connected	Make sure the power plug is securely connected to the socket.
		Direction switch dial in the middle position	Turn the direction switch fully to the left or right to start the massage.

TECHNICAL DATA
Article No. 11344395
DC 12V 2.0A
Power: 24 Watt

Salling Group
Rosbjergvej 33
DK-8220
sallinggroup.com

We cannot be held responsible for any printing errors.