

MANICURE & PEDICURE SÆT

MANUAL

Læs venligst brugervejledningen grundigt inden brug.

Inkluderet i kassen

Elektrisk neglefil: 1 x elektrisk neglefil, 1 x støvskjold, 6 x bits, 6 x sandbånd og 1 x opladerkabel USB Type-C.

Neglestøvsuger: 1 x neglestøvsuger, 1 x filter og 1 x strømkabel.

UV-lampe: 1 x UV-lampe og 1 x strømkabel.

ELEKTRISK NEGLEFIL

Produktoverblik

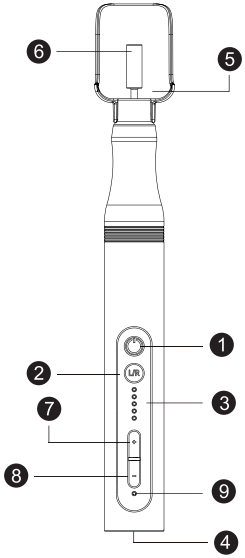

1. Tænd/sluk knap
2. Skift roteringsretning på filen
3. Hastighedsindikator
4. Ladeport
5. Støvskjold
6. Neglebit
7. Skru op for rotationshastighed
8. Skru ned for rotationshastighed
9. Ladeindikator

Anvendelse
Her bruges filen

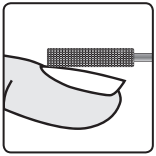

Neglebånd

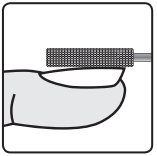

Negl

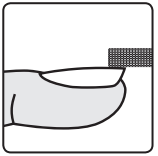

Neglespids

Kend tilbehøret

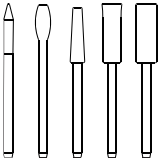

Bits
Kan bruges på følgende:
- Naturlige negle
- Gelénegle
- Akrylnegle

Filene er beregnet til at slibe enten hele neglen, eller kanter og spidser på neglene.



6x





Sandbånd
Kan bruges på følgende:
- Gelénegle
- Akrylnegle

Sandbåndene er beregnet til at forkorte kunstige negle eller slibe gelé eller akryl af, så ny gelé eller akryl kan hæfte bedre på neglen.
De tilhørende sandbånd er i forskellige hårdheder, og det er nemt at skifte båndene, når de er brugt. Jo grovere et bånd, der benyttes, jo mere sliber det af. Detanbefales at benytte en lav hastighed med sandsliberen.

Skift bits
OBS: Sørg for at negle filen er slukket når der skiftes bits.

Bits skiftes ved at trykke bitten ind hullet i enden af neglefilen. Der vil være modstand, så sørg for at bitten er trykket helt ind i fatningen.

Fjern bits ved at hive dem ud af fatningen. Forvent noget modstand så hav et fast greb om bitten.

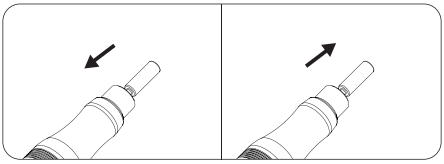

Scan QR-koden for at se hvordan man skifter tippen:

Hastighed
Hastigheden kan justeres ved at trykke på + (7) og - (8). + øger hastigheden og - sænker hastigheden.

De forskellige niveauer ses på hastighedsindikatoren (3) på neglefilen:
En LED lyser:: 7.000 rpm ±15%
To LED'er lyser: 7.800 rpm ±15%
Tre LED'er lyser: 8.600 rpm ±15%
Fire LED'er lyser: 9.400 rpm ±15%
Fem LED'er lyser: 10.000 rpm ±15%

Opladning
Oplad neglefilmaskinen ved at bruge det medfølgende kabel i ladeporten (4). Brug ikke neglefilen under opladning.

ADVARSEL/sikkerhedsforanstaltninger

- Sørg for, at produktet er ladet fuldt op inden første brug.
- Det anbefales at anvende en maske eller lignende ved brug af neglefilen, for at undgå at indånde støvpartikler.
- Vær altid forsigtig når du filer dine negle. Start med en langsom hastighed og gå forsigtigt op i hastighed, så du undgår mulige skader.
- Bemærk, at der hvor der files, bliver der varmt. Undgå at holde filen det samme sted for længe på neglen.

NEGLESTØVSUGER
Produktoverblik

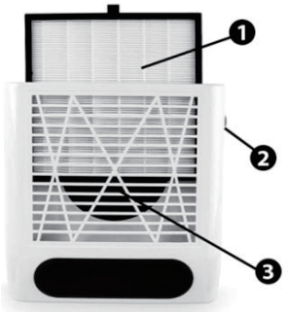

1. Filter
2. Tænd/sluk
3. Ventilator

Anvendelse
Tilslut neglestøvsugeren til et strømstik.
Tænd/sluk på knap 2.
Neglestøvsugeren suger automatisk luft ind når den er tændt.
Sæt hånden på den sorte håndstøtte og sørg for at fingrene files over ventilatoren.

Filter
Filteret kan fjernes ved at trække det ud af maskinen via det sorte hængsel på bagsiden af neglestøvsugeren.

Rengøring
Filteret renses efter brug ved evt. at støvsuge det med en støvsuger på laveste indstilling. Brug ikke vand i filteret.
Tør resten af maskinen af med en hårdt opvredet klud.

ADVARSEL/sikkerhedsforanstaltninger
- Læs denne manual grundigt før brug, og gem den til senere brug.
- Produktet er kun beregnet til opsamling af neglestøv ved manicure og pedicure. Anvend ikke produktet til andre formål.
- Produktet er kun beregnet til indendørs brug.

- Må ikke anvendes i fugtige omgivelser eller udsættes for regn og vand.
- Sørg for, at ventilationsåbningerne ikke blokeres under brug, da dette kan medføre overophedning.
- Hold hår, løstsiddende tøj og fingre væk fra luftindtaget under brug.
- Brug ikke produktet, hvis ledning, stik eller kabinet er beskadiget.
- Sluk altid produktet, og afbryd strømmen før rengøring eller udskiftning af filter.
- Filteret skal altid være monteret under brug. Anvend aldrig produktet uden filter.
- Filteret må ikke vaskes eller skylles med vand eller andre væsker. Dette kan beskadige filteret og reducere produktets ydeevne.
- Rengør filteret ved forsigtigt at banke støvet af eller anvend en blød børste eller en støvsuger. Udskift filteret, hvis det er slidt eller beskadiget.
- Sørg for, at filteret er helt tørt og korrekt monteret, inden produktet tages i brug igen.
- Produktet må kun anvendes under opsyn af en voksen.

UV-lampe

Produktoverblik

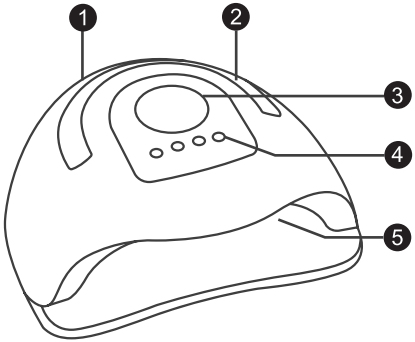

1. Tilslutning til adaptor
2. Håndtag
3. Display
4. Timerfunktion
5. LED-lys

Anvendelse

Denne neglelampe er til hurtig hærdning af UV-gellak, builder-gel, LED-gel og hybrid gel.

Tilslut stikket til UV-neglelampen og herefter adaptoren til stikkontakt.
Der er fire forskellige intervaller:

- 10 sekunder
- 30 sekunder
- 60 sekunder
- 99 sekunder (denne er med lavest intensitet)

Tryk på timerknappen, hvis man ønsker at stoppe timeren inden tiden er gået. UV neglelampen går herefter i standby.

Placeres hånden inde i lampen, uden at der er valgt en timer, starter maskinen automatisk på 120 sekunder.

Vedligeholdelse/rengøring

Rengør med en hårdt opvredet klud efter behov.

ADVARSEL / Sikkerhedsforanstaltninger

- Placér UV-neglelampen på et fladt, fast underlag.
- UV-neglelampen må ikke blive våd og bør ikke anvendes eller opbevares i fugtigt miljø.
- Placér ikke UV-neglelampen og/eller ledning tæt på varmekilder og åben ild.
- Træk altid stikket ud af stikkontakten efter brug.
- Efterlad aldrig UV-neglelampen uden opsyn når den er tændt eller tilsluttet stikkontakt.
- Vikl ikke ledningen rundt om lampen, da dette kan skade ledningen.
- Anvendes der andet kabel eller adapter end det medfølgende, er dette på eget ansvar.
- Bør ikke anvendes af børn og bør opbevares utilgængeligt for børn.
- Kun til indendørs brug.
- UV-neglelampen bør ikke dækkes til.
- Ved tegn på skade, stop da omgående brug af UV-neglelampen og forsøg ikke selv at reparere produktet.
- Det er vigtigt at bemærke at UV-lys kan være skadelige for hud og øjne, og man bør anvende produktet med forsigtighed.
- Anvend ikke neglelampen steder hvor den udsættes for direkte sollys.

Specifikationer

Elektrisk neglefil:
Størrelse: 152,5x21x21 mm
Input: 5V DC 1A
Output: 5V DC 1A
Effekt: 1,5W
Omdrejninger: Op til 10.000 RPM
Brugstid: Op til 3 timer
Opladetid: Op til 2 timerBatteri: 600 mAh lithium (inkluderet, ikke udskiftelig)
Klassificering: IP20

Neglestøvsuger:
Størrelse: 228x241x86 mm
Input: 12V AC 3A
Output: 18W
Effekt: 36W
Klassificering: IP20

UV-lampe:
Størrelse: 230x200x105 mm
Timerfunktion: 10/30/60/99 sekunder
Input: 100-240V AC
Effekt: 30W
Frekvens: 50/60Hz
Lyskilde: 81 LED-pærer
Klassificering: IP20

Batteriproducent (neglefil): Jiaozuo YixingIntelligent Electronic Technology Co. Ltd, No.16, Huafang Road, Xiaoying Industrial and Trade Zone, Xiuwu County, Jiaozuo, Henan Province, Kina.

Elektrisk og elektronisk udstyr (EEE) indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med nedenstående "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.

PO nr.: 109192
Vare nr.: 11335897

I tilfælde af problemer eller spørgsmål til produktet, kontakt da venligst producenten:
Salling Group, Rosbjergvej 33, DK-8220, sallinggroup.com

Gem venligst manualen til fremtidig brug.



MANICURE & PEDICURE SET

USER GUIDE

Please read the user guide carefully before use.

Included in the box

Electric Nail File: 1 x electric nail file, 1 x dust shield, 6 x bits, 6 x sanding belts and 1 x USB Type-C charging cable.

Nail Vacuum: 1 x nail vacuum, 1 x filter and 1 x power cable.

UV Lamp: 1 x UV lamp and 1 x power cable.

ELECTRIC NAIL FILE

Product overview

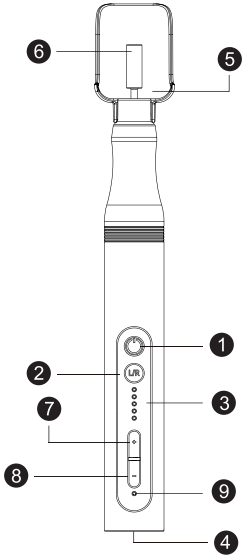

1. On/Off button
2. Change the direction of rotation of the file
3. Speed indicator
4. Charging port
5. Dust shield
6. Nail bit
7. Turn up the rotation speed
8. Turn down the rotation speed
9. Charging indicator

How to use

Here the file is used

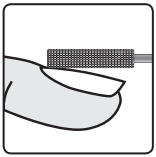

Cuticle tape

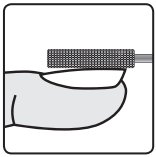

Nail

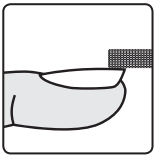

Nail tip

Know the accessories

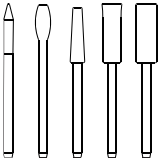

Bits
Can be used on the following:
- Natural nails
- Gel nails
- Acrylic nails

The files are intended to sand either the entire nail, or the edges and tips of the nails.







Sand belt
Can be used on the following:
- Gel nails
- Acrylic nails

The sanding belts are intended to shorten artificial nails or sand off gel or acrylic so that new gel or acrylic can adhere better to the nail.
The accompanying sanding belts come in different hardnesses, and it is easy to change the belts when they are used. The coarser a belt is used, the more it sands off. It is recommended to use a low speed with the sander.

Change bits
NOTE: Make sure the nail file is turned off when changing bits.

To change bits, push the bit into the hole at the end of the nail file. There will be resistance, so make sure the bit is pushed all the way into the socket.

To remove bits, pull them out of the socket. Expect some resistance, so have a firm grip on the bit.

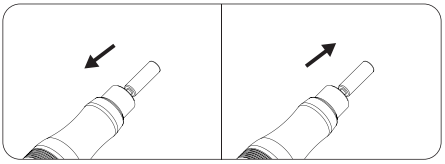

Scan the QR code to see how to change the tip:

Speed
The speed can be adjusted by pressing + (7) and - (8). + increases the speed and - decreases the speed.

The different levels are shown on the speed indicator (3) on the nail file:
One LED lights up: 7,000 rpm ±15%
Two LEDs lights up: 7,800 rpm ±15%
Three LEDs lights up: 8,600 rpm ±15%
Four LEDs lights up: 9,400 rpm ±15%
Five LEDs lights up: 10,000 rpm ±15%

Charging
Charge the nail filer using the included cable in the charging port (4). Do not use the nail file while charging.

WARNING/Safety precautions

- Make sure the product is fully charged before first use.
- It is recommended to use a mask or similar when using the nail file to avoid inhaling dust particles.
- Always be careful when filing your nails. Start at a slow speed and increase the speed carefully to avoid possible damage.
- Please note that the area where you file will become hot. Avoid holding the file in the same place on the nail for too long.

NAIL VACUUM
Product overview

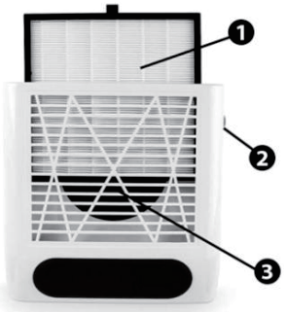

1. Filter
2. On/Off
3. Fan

How to use
Connect the nail vacuum to a power outlet.
Turn on/off button 2.
The nail vacuum automatically sucks in air when it is turned on.
Place your hand on the black hand rest and make sure your fingers are over the fan.

Filter
The filter can be removed by pulling it out of the machine via the black hinge on the back of the nail vacuum.

Cleaning
Clean the filter after use by vacuuming it with a vacuum on the lowest setting.
Do not use water in the filter.
Wipe the rest of the machine with a hard wrung cloth.

WARNING/Safety precautions
- Read this manual carefully before use and save it for future reference.
- The product is only intended for collecting nail dust during manicure and pedicure. Do not use the product for any other purpose.
- The product is intended for indoor use only.

- Do not use in damp environments or expose to rain or water.
- Make sure that the ventilation openings are not blocked during use, as this may cause overheating.
- Keep hair, loose clothing and fingers away from the air intake during use.
- Do not use the product if the cord, plug or housing is damaged.
- Always switch off the product and disconnect the power supply before cleaning or replacing the filter.
- The filter must always be installed during use. Never use the product without a filter.
- Do not wash or rinse the filter with water or other liquids. This may damage the filter and reduce the performance of the product.
- Clean the filter by gently knocking off the dust or using a soft brush or a vacuum. Replace the filter if it is worn or damaged.
- Make sure the filter is completely dry and correctly installed before using the product again.
- The product may only be used under adult supervision.

UV lamp

Product overview

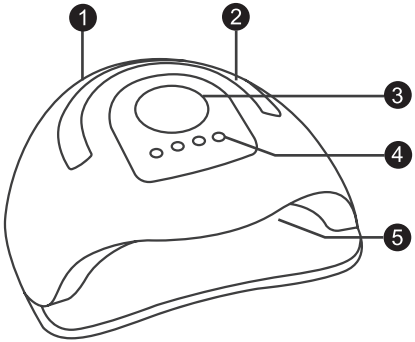

1. Adapter connection
2. Handle
3. Display
4. Timer function
5. LED light

How to use
This nail lamp is for fast curing of UV gel polish, builder gel, LED gel and hybrid gel.

Connect the plug to the UV nail lamp and then the adapter to the power outlet. There are four different intervals:
- 10 seconds
- 30 seconds
- 60 seconds
- 99 seconds (this is the lowest intensity)

Press the timer button if you want to stop the timer before the time has elapsed. The UV nail lamp will then go into standby mode.

If you place your hand inside the lamp without selecting a timer, the machine will automatically start in 120 seconds.

Maintenance/cleaning
Clean with a hard wrung cloth as needed.

WARNING / Safety precautions
- Place the UV nail lamp on a flat, solid surface.
- The UV nail lamp must not get wet and should not be used or stored in a humid environment.
- Do not place the UV nail lamp and/or cord near heat sources and open flames.
- Always unplug the plug from the socket after use.
- Never leave the UV nail lamp unattended when it is switched on or connected to a socket.
- Do not wrap the cord around the lamp, as this may damage the cord.
- If a cable or adapter other than the one provided is used, this is at your own risk.
- Should not be used by children and should be stored out of the reach of children.
- For indoor use only.
- The UV nail lamp should not be covered.
- If there is any sign of damage, stop using the UV nail lamp immediately and do not attempt to repair the product yourself.
- It is important to note that UV light can be harmful to the skin and eyes, and the product should be used with caution.
- Do not use the nail lamp in places where it is exposed to direct sunlight.

Specifications
Electric nail file:
Size: 152.5x21x21 mm
Input: 5V DC 1A
Output: 5V DC 1A
Power: 1.5W
Speed: Up to 10,000 RPM
Use time: Up to 3 hours

Charging time: Up to 2 hours Battery: 600 mAh lithium (included, not replaceable)
Classification: IP20

Nail vacuum:
Size: 228x241x86 mm
Input: 12V AC 3A
Output: 18W
Power: 36W
Classification: IP20

UV lamp:
Size: 230x200x105 mm
Timer function: 10/30/60/99 seconds
Input: 100-240V AC
Power: 30W
Frequency: 50/60Hz
Light source: 81 LED bulbs
Classification: IP20

Battery manufacturer (nail file): Jiaozuo YixingIntelligent Electronic Technology Co. Ltd, No.16, Huafang Road, Xiaoying Industrial and Trade Zone, Xiuwu County, Jiaozuo, Henan Province, China.

Electrical and electronic equipment (EEE) contains materials, components and substances that can be dangerous and harmful to human health and the environment when waste electrical and electronic equipment (WEEE) is not disposed of properly. Products marked with the “crossed out bin” are electrical and electronic equipment. The crossed bin symbolizes that waste from electrical and electronic equipment must not be disposed of together with unsorted household waste, but must be collected separately. To this end, all municipalities have established collection schemes where waste electrical and electronic equipment can be handed in free of charge by citizens at recycling stations or other collection points or collected directly from households. Further information must be obtained from the municipality’s technical administration.

PO no.: 109192
Article no.: 11335897

In case of problems or questions regarding the product, please contact the manufacturer: Salling Group, Rosbjergvej 33, DK-8220, sallinggroup.com

Please keep the user guide for future use.