PROSONIC



BRUGSANVISNING

ELTANDBØRSTE

11293547

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Prosonic. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.
Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/ elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.
- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETTEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



OVERBLIK

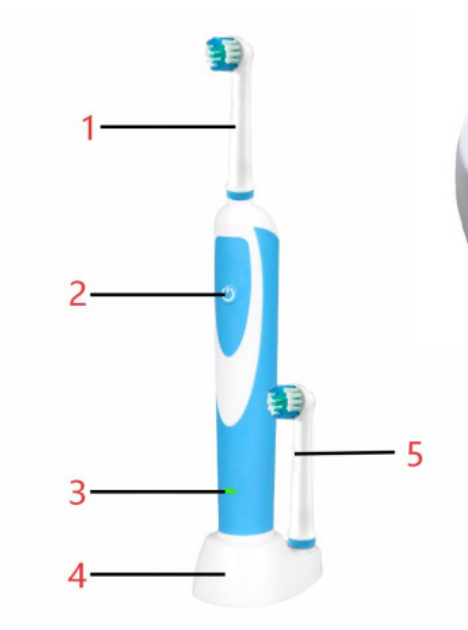



1. Tandbørstehoved (udskifteligt)
2. Tænd/sluk-kontakt, funktionsvælger
3. Kontrollampe for opladning
4. Opladerbase
5. Tandbørstehoved
6. Batterikontakt
7. Holder til tandbørstehoved

INDHOLDET I PAKKEN:

- 1 tandbørste
- 2 medium tandbørstehoveder
- 1 batterioplader
- 1 brugervejledningl

FØR APPARATET TAGES IBRUG FØRSTE GANG

- Fjern al emballagen.
- Kontrollér enheden for evt. transportskader.

VIGTIGE SIKKERHEDSINSTRUKTIONER

- FARE! Risiko for elektrisk stød pga. fugt!
- Batteriopladeren er forbundet til lysnettet og må ikke anvendes i brusekabine, badekar eller over en fyldt håndvask.
- Placér aldrig batteriopladeren på et sted, hvor den kan falde i vandet.

OPLADNING AF BATTERIET

- Oplad batteriet fuldt ud inden første ibrugtagning.
- Det tager cirka 24–30 timer at oplade batteriet fuldstændigt. Driftstiden er cirka 28 dage, eller cirka 170 minutter.

- Placér tandbörsten over ladekontakten på batteriopladeren efter brugen for at sikre, at tandbörsten altid er fuldt opladet. Regelmässig opladning skader ikke batteriet.
- Slut batteriopladerens stik til en passende stikkontakt. Der skal være let adgang til stikkontakten, når opladeren er sluttet til.
- Placér den slukkede tandborste over ladekontakten på batteriopladeren.

KONTROLLAMPE TIL OPLADNING

- Den røde kontrollampe blinker, når batteriniveauet er lavt, og minder dig om at oplade den.
- Den grønne kontrollampe vil blinke langsomt, mens tandbørsten oplades.
- Den grønne kontrollampe vil forblive konstant tændt, når batteriet er fuldt opladet.
- Tandbørsten kan ikke tændes, mens den lades op.

MONTER TANDBØRSTEHOVEDET

- Med denne enhed følger 2 tandbørstehoveder.
- Tag et tandbørstehoved, og skub det ned over akslen på tandbørsten.
- Tag tandbørstehovedet af ved forsigtigt at trække det opad.

BEMÆRK: Vi anbefaler, at tandbørstehovedet udskiftes hver 3. måned samt efter en infektion.

BETJENING

1. Tag tandbörsten af batteriopladeren.
2. Fugt børsterne, påfør tandpasta, og tænd først tandbörsten, når tandbørstehovedet allerede befinder sig i din mund.
3. Tryk på knappen ⏻ for at starte Rensningstilstand. Tandbørsten slukker automatisk efter 2 minutter. Dette er den hurtigste hastighed.
4. Inden for 10 sekunder efter, at du har startet Rensningstilstand, skal du trykke på knappen ⏻ en gang til for at skifte til Blegningstilstand. Hastigheden er en smule langsommere.
5. Inden for 10 sekunder efter, at du har startet Blegningstilstand, skal du trykke på knappen ⏻ for tredje gang for at skifte til Skånsom-tilstand. Dette er den laveste hastighed.
6. Inden for 10 sekunder efter at have startet Skånsom-tilstand, tryk på knappen ⏻ for fjerde gang for at skifte til Massagetilstand. Hastigheden vil svinge.
7. Tryk på knappen ⏻ for femte gang for at slukke apparatet.
8. Hvis tandbørsten har kørt i mere end 10 sekunder, vil et tryk på knappen igen stoppe den, uanset hvilken tilstand den er i.
9. Hver tilstand varer i 2 minutter.

BEMÆRK: Hvis du er nybegynder med en elektrisk tandbørste og har relativt følsomt tandkød, anbefales det at bruge Skånsom-tilstand de første 1 til 2 uger og derefter skifte til den normale Rensningstilstand.

INTELLIGENT HUKOMMELSESFUNKTION

Hvis du for eksempel bruger Blegningstilstand første gang du børster tænder, vil tandbørsten starte i samme tilstand næste gang du tænder den.

RENGØRING / HYGIEJNEKRAV

- ⚠ FARE! Fare for elektrisk stød!
- Tag stikket ud af stikkontakten, inden du rengør batteriopladeren.
- Undlad at nedsænke tandbørsten eller batteriopladeren i vand! Batteriopladeren skal være helt tør, før du igen slutter den til lysnettet.
- For at opretholde tandbørstehovedets hygiejniske funktionalitet bør du skylle det grundigt efter hver brug og lade det tørre.
- Tag tandbørstehovedet af én gang om ugen, og rengør det i varmt vand.
- Skyl tandbørstens håndgreb, og tør det.
- Tør om nødvendigt batteriopladeren over med en fugtig klud, og tør den omhyggeligt.

OPBEVARING

Kobl enheden fra lysnettet, og opbevar den på et tørt sted.

BATTERISPECIFIKATIONER

Produkt: Genopladelig Li-ion celle | **Model:** 14500
Kapacitet/Spænding: 3,7 V / 600 mAh / 2,22 Wh | **Vægt:** ~19,7 g
Produktionsdato: 07.2026 | **Livscyklus:** >80% kapacitet efter 300 cyklusser
Sikkerhed ved batteribrand: Brug vand (rigelige mængder, forstøvning) – Brug IKKE CO_2.
Sikkerhed ved omgivende brand: Konventionelle slukningsmidler som vand, pulverslukker, skum eller CO_2 kan anvendes.
Kemisk sammensætning: Nikkel-kobolt-mangan / aluminium / kobber [NMC / Al / Cu]
Kritiske råstoffer (>0,1% w/w): Nikkel, kobolt, mangan, lithium, naturlig grafit, aluminium [Al], kobber [Cu].
Farlige stoffer (udover Hg, Cd, Pb): Lithiumhexafluorphosphat ($LiPF_6$), dimethylcarbonat, ethylencarbonat, carbon-nanorør.
Producent og produktionsanlæg: SShenzhen Chuangkehui Technology Co., Ltd.
Room 11168-2, A Building, YiKang Mansion, HuaRong Road, GaoFeng Community, DaLang Street, LongHua District, ShenZhen, Kina.
Oprindelsesland: Fremstillet i Kina

TEKNISKE DATA

Artikelnr. 11293547
Lysnetspænding: 220-240V~, 50/60 Hz
Effekt: 1,5W
Batteri: 1x 3,7 V Li-ion 600 mAh

Salling Group
Rosbjergvej 33
DK-8220
sallinggroup.com

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Prosonic. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.
Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.
- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



OVERVIEW

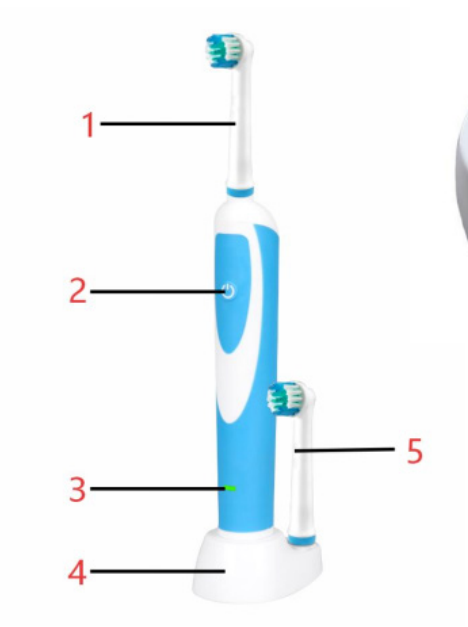



1. Toothbrush head (replaceable)
2. On/off switch, mode selector
3. Charging indicator light
4. Charger base
5. Toothbrush head
6. Battery charger peg
7. Toothbrush head bracket

ITEMS SUPPLIED:

- 1 toothbrush
- 2 medium toothbrush heads
- 1 battery charger
- 1 manual

BEFORE FIRST USE

- Remove all packing materials.
- Check that the device is undamaged.

IMPORTANT SAFETY INSTRUCTIONS

- DANGER! Risk of electric shock due to moisture!
- The battery charger is connected to mains voltage and must not be used in the shower, bath, or over washbasins filled with water.
- Never place the battery charger anywhere it could fall into water.

CHARGING THE BATTERY

- Fully charge the battery before using it for the first time.
- It takes approximately 24–30 hours to fully charge the battery. The operating time is approximately 28 days, or about 170 minutes.

- Place the toothbrush on the peg of the battery charger after use to ensure it always operates at full power. Regular charging will not damage the battery.
- Plug the mains plug of the battery charger into a suitable wall socket. The wall socket should remain easily accessible after connection.
- Place the switched-off toothbrush onto the peg of the battery charger.

CHARGING INDICATING LIGHT

- The red light will flash when the battery power is low, reminding you to charge it.
- The green light will flash slowly while the toothbrush is charging.
- The green light will remain steadily lit when the battery is fully charged.
- The toothbrush cannot be switched on while it is charging.

INSTALL THE TOOTHBRUSH HEAD

- The items supplied include 2 toothbrush heads.
- Take a toothbrush head and slide it onto the shaft of the toothbrush.
- To remove the head, carefully pull it upwards.

NOTE: We recommend replacing the toothbrush head every 3 months or after an infection.

OPERATION

1. Remove the toothbrush from the battery charger.
2. Moisten the bristles, apply toothpaste, and switch on the toothbrush only when the brush head is already in your mouth.
3. Press the ⏻ button once to start Clean mode. The toothbrush will stop automatically after 2 minutes. This is the fastest speed.
4. Within 10 seconds after starting Clean mode, press the ⏻ button a second time to switch to Whitening mode. The speed is slightly slower.
5. Within 10 seconds after starting Whitening mode, press the ⏻ button a third time to switch to Sensitive mode. This is the lowest speed.
6. Within 10 seconds after starting Sensitive mode, press the ⏻ button a fourth time to switch to Massage mode. The speed will fluctuate.
7. Press the ⏻ button a fifth time to stop the appliance.
8. If the toothbrush has been running for more than 10 seconds, pressing the button again will stop it, regardless of the mode.
9. Each mode runs for 2 minutes.

NOTE: If you are new to using an electric toothbrush and have relatively sensitive gums, it's recommended to use Sensitive mode for the first 1 to 2 weeks, and then switch to normal clean mode later.

INTELLIGENT MEMORY FUNCTION

For example, if you use Whitening mode the first time you brush your teeth, the toothbrush will start in the same mode the next time you turn it on.

CLEANING / HYGIENE REQUIREMENTS

- ⚠ DANGER! Risk of Electric Shock!
- Before cleaning the battery charger, unplug it from the wall socket.
- Do not immerse the toothbrush or battery charger in water! The battery charger must be completely dry before reconnecting it to the socket.
- To maintain the hygienic functionality of the toothbrush heads, rinse them thoroughly after each use and allow them to dry.
- Remove the toothbrush head once a week and clean it in hot water.
- Rinse the toothbrush handle and wipe it dry.
- If necessary, wipe the battery charger with a damp cloth and dry it thoroughly.

STORAGE

Unplug the device from the mains and store it in a dry location.

BATTERY SPECIFICATIONS

Product: Rechargeable Li-ion Cell Battery | **Model:** 14500
Rating: 3.7 V / 600 mAh / 2.22Wh | **Weight:** ~19.7 g
Mfg. Date: 07.2026 | **Cycle Life:** >80% capacity after 300 cycles
Battery Fire Safety: Use water [copious amounts, spray] - DO NOT use CO_2.
Surrounding Fire Safety: Conventional agents such as water, dry powder, foam, or CO_2 may be used.
Chemical Composition: Nickel Cobalt Manganese / Aluminum / Copper [NMC / Al / Cu]
Critical Raw Materials [>0.1% w/w): Nickel, Cobalt, Manganese, Lithium, Natural Graphite, Aluminum [Al], Copper [Cu].
Hazardous Substances (other than Hg, Cd, Pb]: Lithium hexafluorophosphate ($LiPF_6$) Dimethyl carbonate. Ethvlene carbonate, Carbon nanotubes.
Manufacturer and Production Facility: Shenzhen Chuangkehui Technology Co., Ltd. Room 11168-2, A Building, YiKang Mansion, HuaRong Road, GaoFeng Community, DaLang Street, LongHua District, ShenZhen, P. R. China
Country of Origin: Made in China

TECHNICAL DATA

Article No. 11293547
Power rating: 1.5 W
Mains voltage: 220-240V~, 50/60 Hz
Battery: 1x 3.7V Li-ion 600 mAh

Salling Group
Rosbjergvej 33
DK-8220
sallinggroup.com

We cannot be held responsible for any printing errors.