
MASSAGE PRO

Recovery Boots

Brugermanual MP-2979

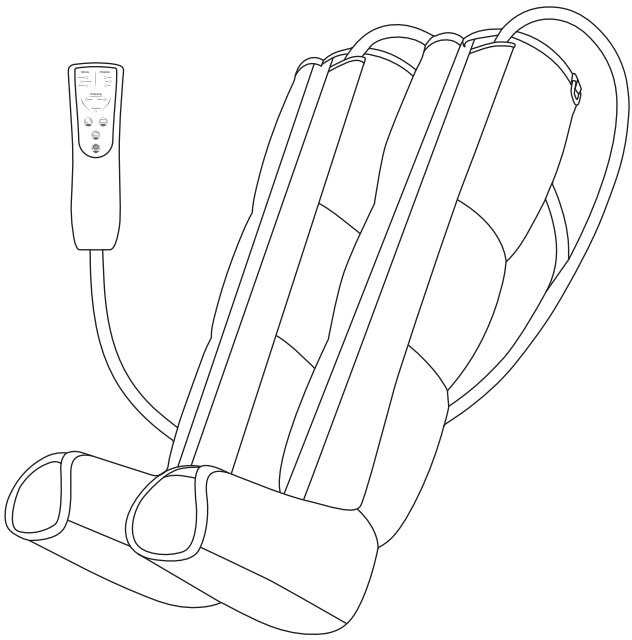

DA

Læs venligst denne manual grundigt, før du bruger produktet, for at sikre korrekt og sikker brug. Gem manualen til senere brug.

Sikkerhedsforanstaltninger
Bemærk

Hvis du har en af følgende tilstande, bør du kontakte din læge, før du bruger produktet:
1. Graviditet eller kort tid efter fødsel
2. Hjertesygdom eller brug af pacemaker
3. Svage eller beskadigede knogler
4. Ondartede tumorer
5. Hudproblemer såsom infektioner, hævelse, rødme eller forbrændinger

Fare


1. Dette produkt må ikke bruges af personer med nedsatte fysiske, sensoriske eller mentale evner, eller af personer uden erfaring eller viden, medmindre de er under opsyn af en ansvarlig person. Opbevar produktet utilgængeligt for børn. Lad ikke børn lege med eller bruge produktet.
2. Brug kun den korrekte spænding som angivet for produktet.
3. Forsøg ikke selv at adskille eller reparere produktet. Reparation må kun udføres af kvalificerede teknikere.
4. Brug ikke produktet i våde eller fugtige omgivelser. Undgå kontakt med vand eller andre væsker.
5. Brug eller opbevar ikke produktet i nærheden af brandfarlige, eksplosive eller kemiske materialer.
6. Brug ikke skarpe genstande på produktet, da det kan beskadige det.
7. Brug ikke produktet i omgivelser med høj temperatur.
8. Stå eller gå ikke rundt, mens du bruger produktet.
9. Brug ikke produktet, mens du sover.
10. Træk ikke i ledningen, når du tager stikket ud. Træk altid i selve stikket.
11. Tilslut eller frakobl ikke adapteren eller luftslangen med våde hænder.


Advarsler og anbefalinger


1. Hvis strømledningen er beskadiget, skal den udskiftes af producenten eller en kvalificeret tekniker for at undgå fare.
2. Stop straks med at bruge produktet, hvis du føler ubehag eller oplever noget unormalt.
3. Brug ikke produktet i mere end 20 minutter ad gangen. Hvis du vil bruge det igen, skal du lade det hvile i mindst 30 minutter før næste brug.


Beskrivelse

1. Benmanchet
2. Strømadapter
3. Slangetilslutning
4. Rille
5. Tænd/sluk-knap
6. Massageområde
7. Trykniveau
8. Tilstandsvalg
9. Kontrolpanel
10. Luftdyse-dæksel

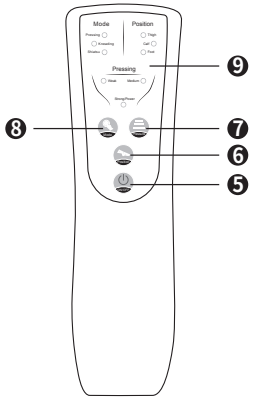




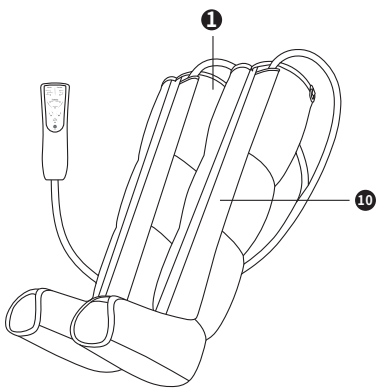

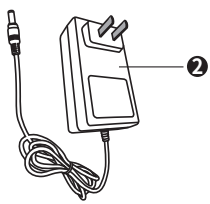


DA


Sådan bruger du produktet

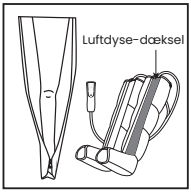


Placer benene i de tilsvarende benmanchetter.
Højre ben: luftdyse-dækslet skal vende mod højre.
Venstre ben: luftdyse-dækslet skal vende mod venstre.

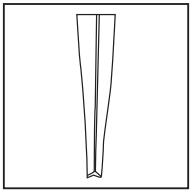


Lyn benmanchetterne, og juster dem, så de sidder korrekt på benene.

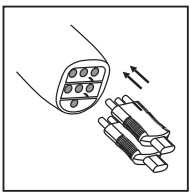


Sæt slangetilslutningen i den tilsvarende indgang på hovedenheden.

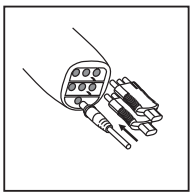

Sæt strømstikket i den tilsvarende indgang på hovedenheden.

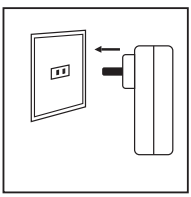


Tilslut strømadapteren til en stikkontakt.

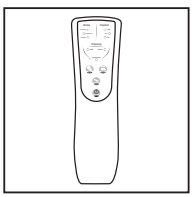

Tryk på tænd/sluk-knappen for at starte enheden.

Betjening

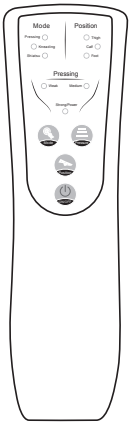

Knap	Funktion	Beskrivelse
ON/OFF	Tænd/sluk	Tænder og slukker produktet.
Position	Position	Vælger massageområdet på kroppen.
Mode	Tilstand	Tryk for at skifte mellem massagetilstande.
Pressure	Tryk	Justerer massageintensitet: svag / medium / kraftig.

1. Tryk på tænd/sluk-knappen for at tænde enheden. Standardindstillingen er trykmassage på svag intensitet.
2. Tryk på Mode-knappen for at skifte mellem følgende massagetilstande: Trykmassage / Æltning / Shiatsu.
3. Tryk på Pressure-knappen for at justere massageintensiteten: svag → medium → kraftig.
4. Tryk på Position-knappen for at vælge det ønskede massageområde. Indstillingerne skifter mellem: Lårmassage, Lægmassage, Fodmassage, Lår + læg, Fod + læg.
5. Tryk på tænd/sluk-knappen efter brug for at slukke enheden.
6. Produktet har en automatisk slukketimer på 20 minutter. Massageenheden slukker automatisk og går i standby efter 20 minutters kontinuerlig brug.

Rengøring og vedligeholdelse

Sluk altid for strømmen, før du rengør produktet.

- Rengør enheden med en let fugtig klud, og tør den derefter af med en blød klud.
- Brug ikke rengøringsmidler, børster, benzin, petroleum, glasrens eller fortynder til rengøring af enheden.
- Efter rengøring skal enheden opbevares i original emballage eller på et tørt og godt ventileret sted. Undgå fugt og direkte sollys.
- Enheden er designet til at være vedligeholdelsesfri og kræver ikke regelmæssig smøring.

DA

Fejlfinding

Hvis du oplever problemer under brug, kan du se nedenstående tips og mulige løsninger.

Problem	Årsag	Løsning
Virker ikke	Strømadapteren er ikke tilsluttet kontrolenheden.	Tilslut DC-stikket korrekt til kontrolenheden.
	Strømadapteren er ikke korrekt sat i stikkontakten.	Sæt adapteren fast i en stikkontakt.
Slukker automatisk	Timeren har nået den indstillede tid.	Tænd massageenheden igen.
Ujævnt tryk på venstre og højre ben	Luftslangen er bøjet.	Sørg for, at slangen ikke er bøjet.

Strømadapter specifikationer

Indgang: 100–240V AC, 50/60Hz, 1.0A (maks.)
Udgang: 12V ⎓ 2A, 24W

SORTERINGSVEJLEDNING

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning.


Fremstillet for og importeret af:

Stock Group A/S
Gammelmarksvej 11
DK-7100 Vejle
www.stockgroup.dk

MASSAGE PRO

Recovery Boots

User Manual MP-2979

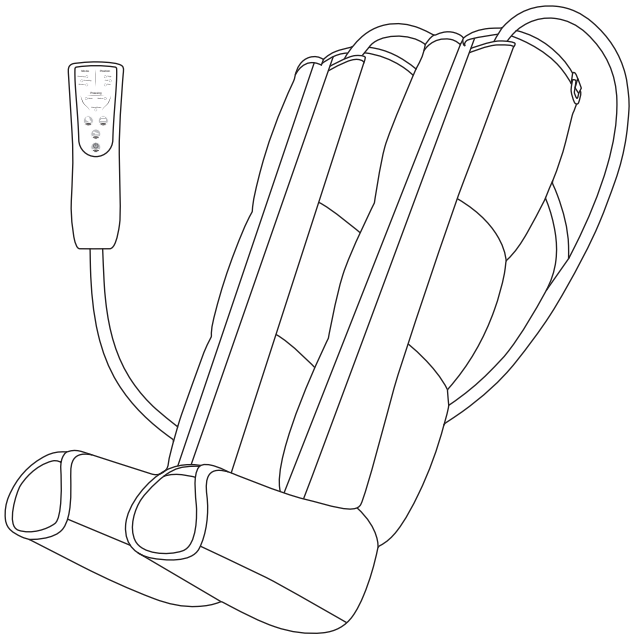

EN

Please read this manual carefully before using the product to ensure safe and correct use. Keep this manual for future reference.

Safety Precautions

Notes

If you have any of the following conditions, please consult your doctor before using this product:

1. Pregnancy or shortly after childbirth.
2. Heart disease or use of a pacemaker.
3. Weak or damaged bones.
4. Malignant tumors.
5. Skin problems such as infections, swelling, redness, or burns.

Danger

1. This product must not be used by people with reduced physical, sensory, or mental abilities, or by people without experience or knowledge, unless they are supervised by a responsible person. Keep out of reach of children. Do not allow children to play with or use this product.
2. Only use the correct voltage as specified for this product.
3. Do not disassemble or repair the product yourself. Repairs must only be carried out by qualified technicians.
4. Do not use the product in wet or humid environments. Do not allow it to come into contact with water or other liquids.
5. Do not use or store the product near flammable, explosive, or chemical materials.
6. Do not use sharp objects on the product, as this may cause damage.
7. Do not use the product in high-temperature environments.
8. Do not stand or walk while using the product.
9. Do not use the product while sleeping.
10. Do not pull the power cord when unplugging the adapter. Always pull the plug itself.
11. Do not plug in or unplug the adapter or air hose with wet hands.


Warnings & Recommendations


1. If the power cord is damaged, it must be replaced by the manufacturer or a qualified technician to avoid danger.
2. Stop using the product immediately if you feel discomfort or notice anything unusual.
3. Do not use the product for more than 20 minutes at a time. If you want to use it again, let it rest for at least 30 minutes before the next use.


EN


Description

1. Leg sleeve
2. Power adapter
3. Tube connector
4. Groove
5. Power button
6. Massage position
7. Pressure level
8. Mode selection
9. Control panel
10. Air nozzle cover

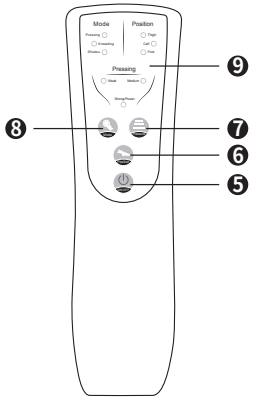




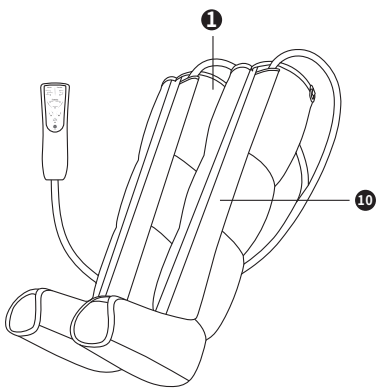

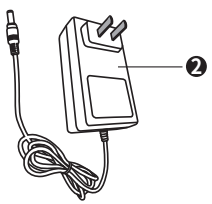


EN


How to Use

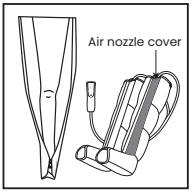


Place your legs into the matching leg sleeves. Right leg: air nozzle cover on the right side. Left leg: air nozzle cover on the left side.

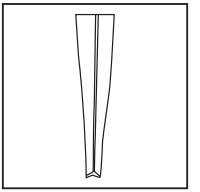


Zip up the sleeves and adjust them so they sit correctly on your legs.

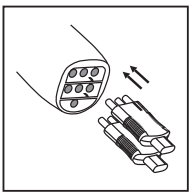


Insert the tube connector into the corresponding inlet on the main unit.

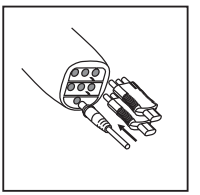

Insert the power plug into the corresponding socket on the main unit.

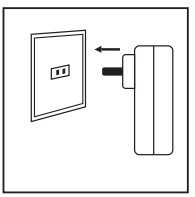


Plug the power adapter into a wall outlet.

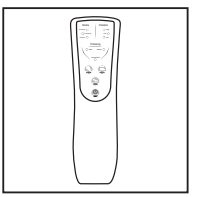

Press the power button to start the device.

Operation

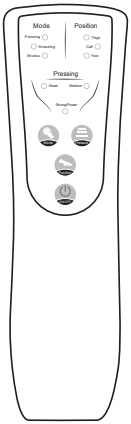

Button	Feature	Operation
	Power	Turns the product on and off.
	Position	Selects the target massage area on the body.
	Mode	Press to cycle through the different massage modes.
	Pressure	Adjusts massage intensity: Weak / Medium / Strong.

1. Press the Power button to turn on the device. The default setting is Pressing Mode at Weak pressure.
2. Press the Mode button to switch between the following massage modes: Pressing Mode / Kneading Mode / Shiatsu Mode.
3. Press the Pressure button to adjust the massage intensity: Weak → Medium → Strong.
4. Press the Position button to select your desired massage area. The settings cycle through: Thigh Massage, Calf Massage, Foot Massage, Thigh + Calf Massage, Foot + Calf Massage.
5. After use, press the Power button to turn off the device.
6. This product has a 20-minute auto shut-off timer. The massager will automatically turn off and enter standby mode after 20 minutes of continuous use.

Cleaning & Maintenance

Always turn off the power before cleaning the product.

- Clean the product with a slightly damp cloth, then dry it with a soft cloth.
- Do not use detergent, cleaning brushes, gasoline, kerosene, glass cleaner, or thinner to clean the product.
- After cleaning, store the product in its original packaging or in a dry and well-ventilated place. Avoid moisture and direct sunlight.
- This product is designed to be maintenance-free and does not require regular lubrication.

EN

Troubleshooting

If you experience problems during use, please refer to the tips and possible solutions below.

Problem	Cause	Solution
Does not work	The power adapter is not connected to the controller.	Connect the DC plug securely to the controller.
	The power adapter is not plugged into the outlet properly.	Plug the adapter firmly into a wall outlet.
Turns off automatically	The timer has reached the set time.	Turn on the massager again.
Uneven pressure on left and right legs	The air tube is bent.	Make sure the tube is not bent.

Power Adapter Specifications

Input: 100–240V AC, 50/60Hz, 1.0A (Max)
Output: 12V ⎓ 2A, 24W

SORTING GUIDE

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed -out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.

Manufactured for and imported by:

Stock Group A/S
Gammelmarksvej 11
DK-7100 Vejle
www.stockgroup.dk