






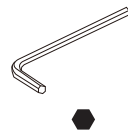
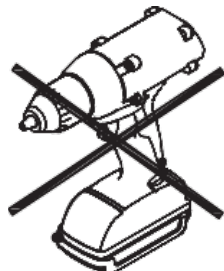
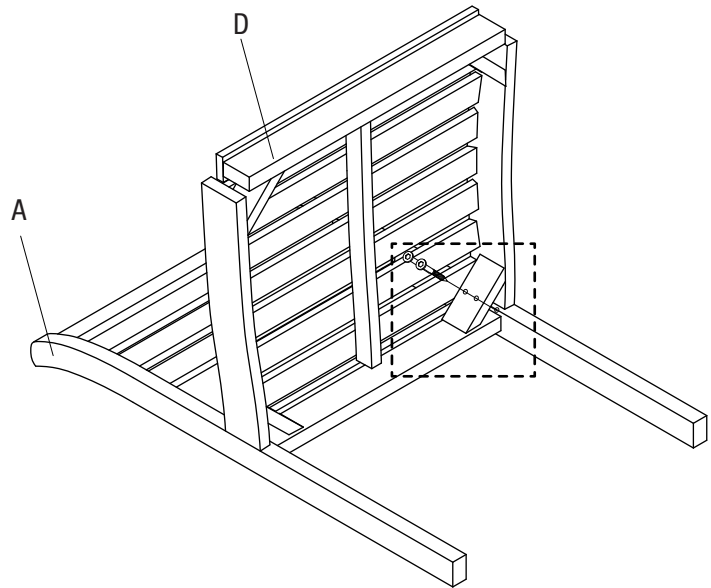


# Assembly Instructions



## ROSENBORG KD HAVESTOL

							
Backrest	Left Arm	Right Arm	Seat	Bolt - M6.5*60	Bolt - M6*43	Allen Key	
A	1 pc	B	1 pc	C	1 pc	D	1 pc
E	8 pcs	F	2 pcs	G	1 pc		



# 1

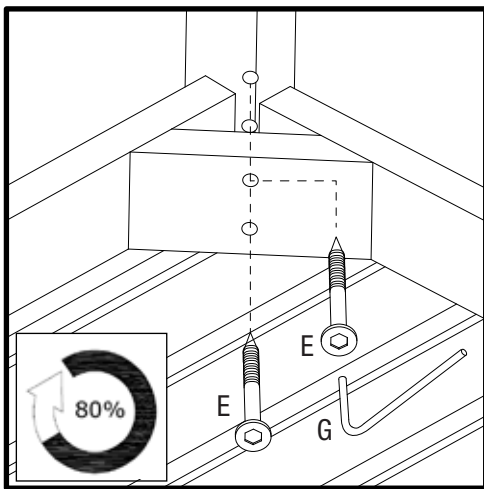



# 2

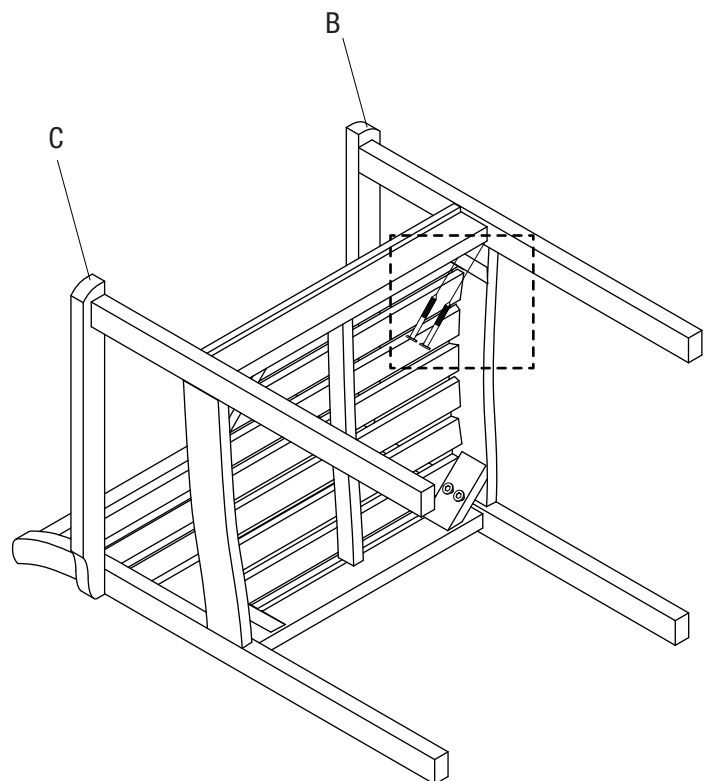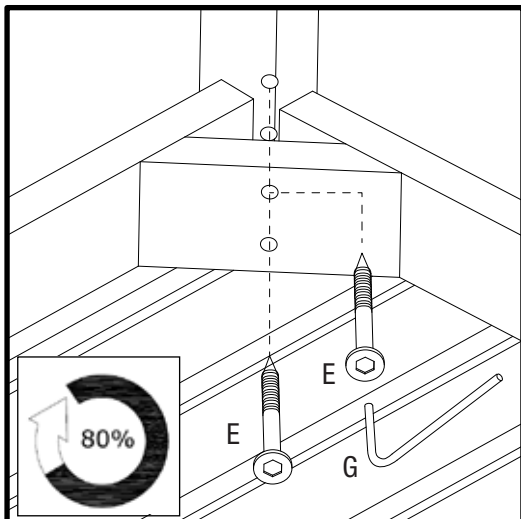

3

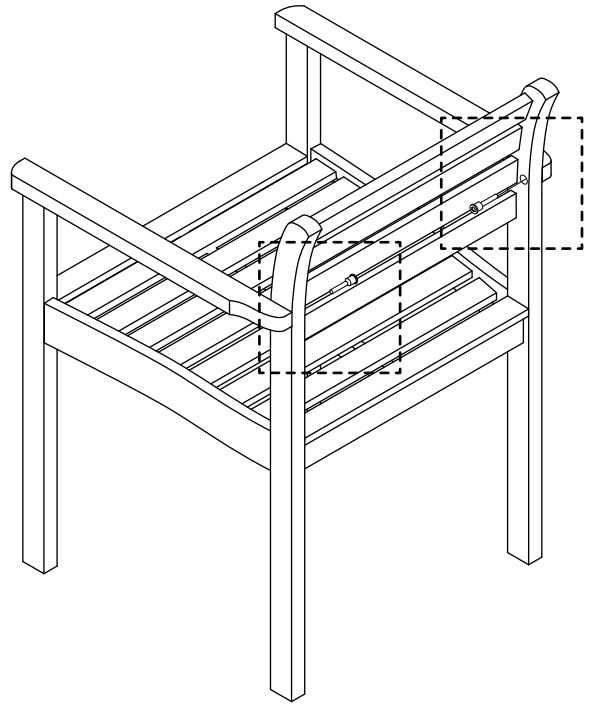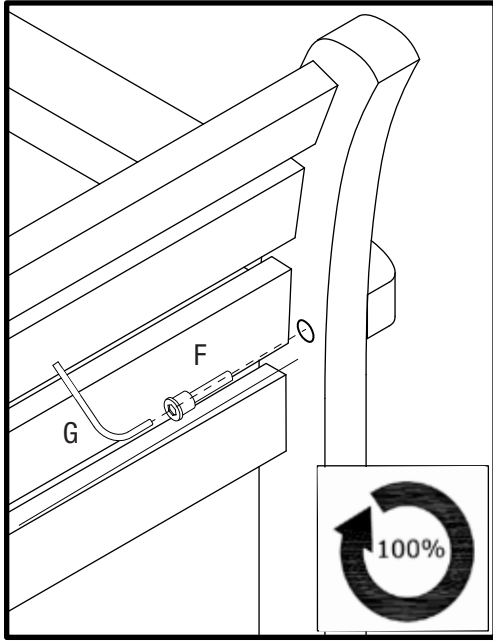

4

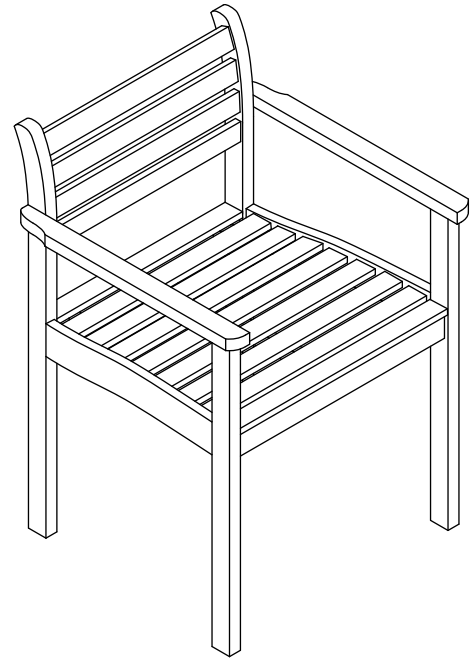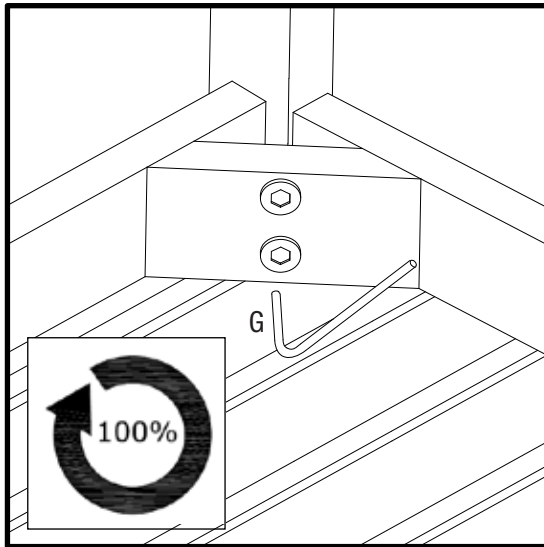

5

