
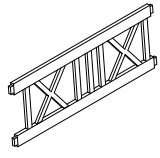
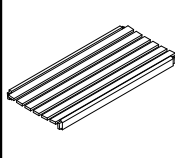

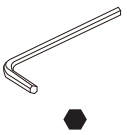
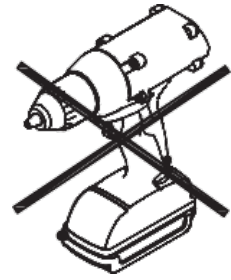



Assembly Instructions

ROSENBORG KOMPAKT BÆNK 115 CM

 Leg	 Backrest	 Seat	 Bolt - M6*43	 Allen Key					
A	2 pcs	B	1 pc	C	1 pc	D	8 pcs	E	1 pc



1

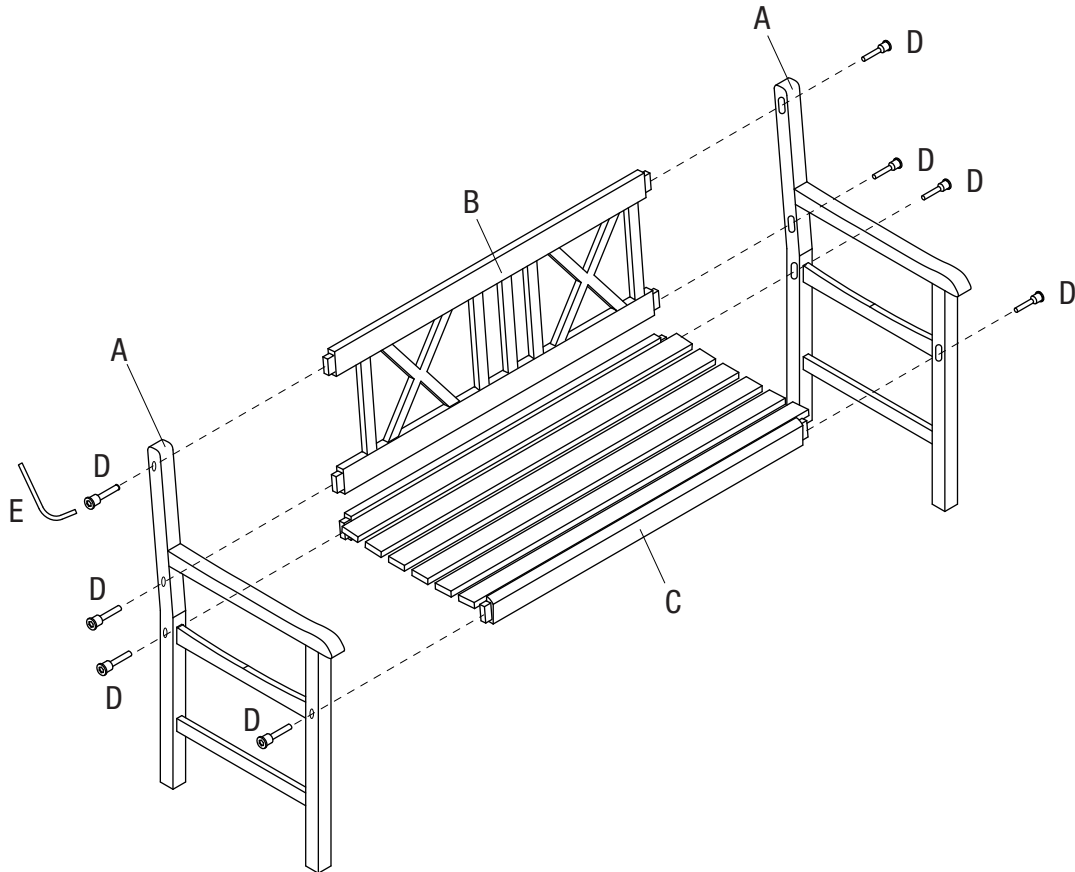

2

