

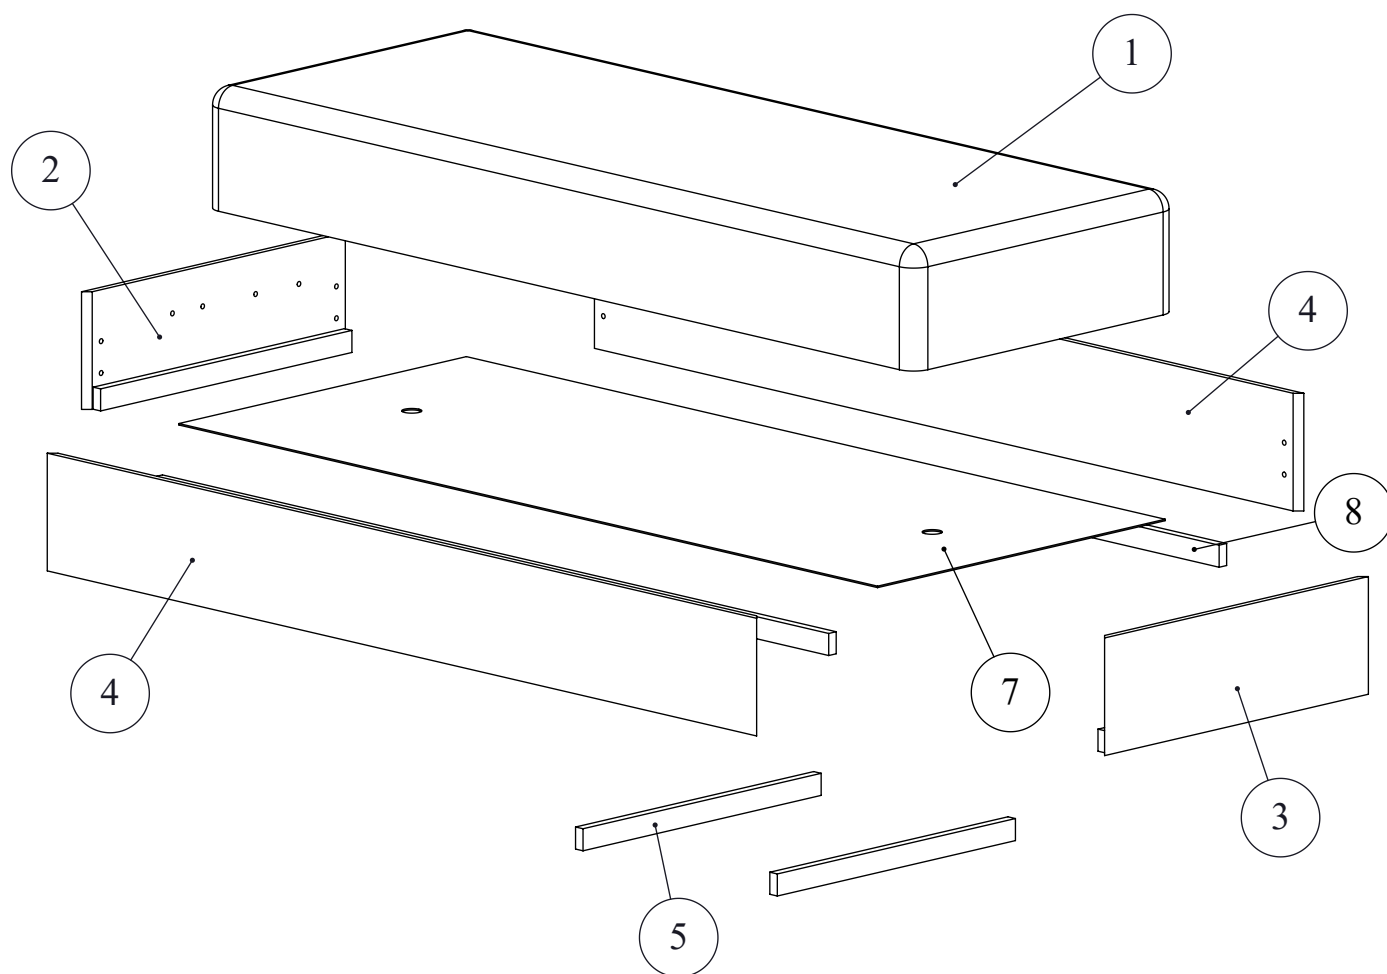


Assembling instruction


800 / 900 / 1200 / 1400 mm

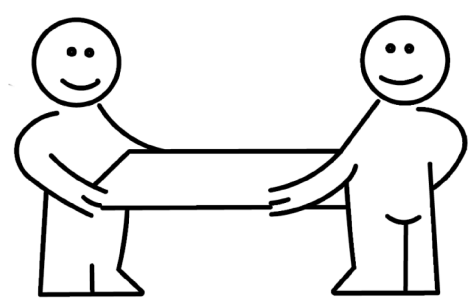


①	x1	⑦	x1
②	x1	⑧	x2
③	x1		
④	x2		
⑤	x2		

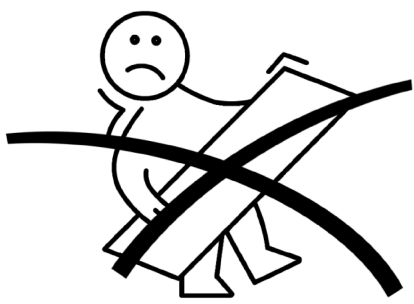


IMPORTANT - TWO PERSONS MINIMUM !!!

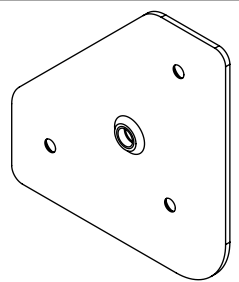


Ax4




Bx4

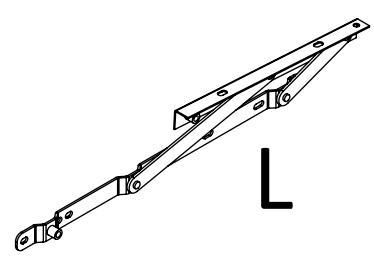

Cx1

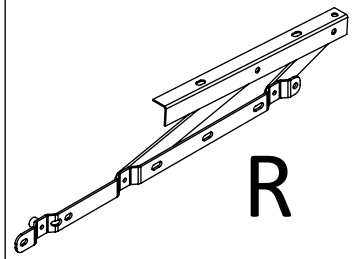


Dx1

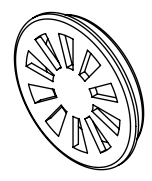


Ex2



Fx10

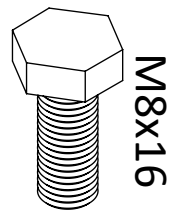


Gx4

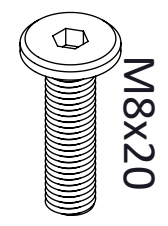


Hx28




Ix4

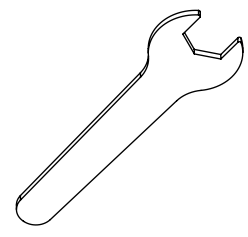


Jx1

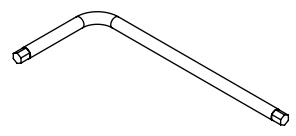


Kx1

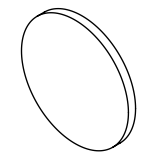

Lx4

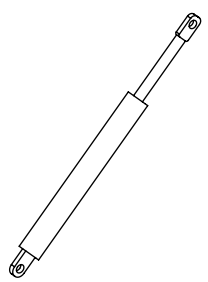


Mx2

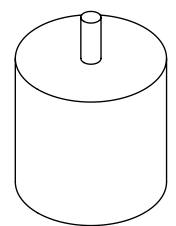


Nx4











Ox12




Px1

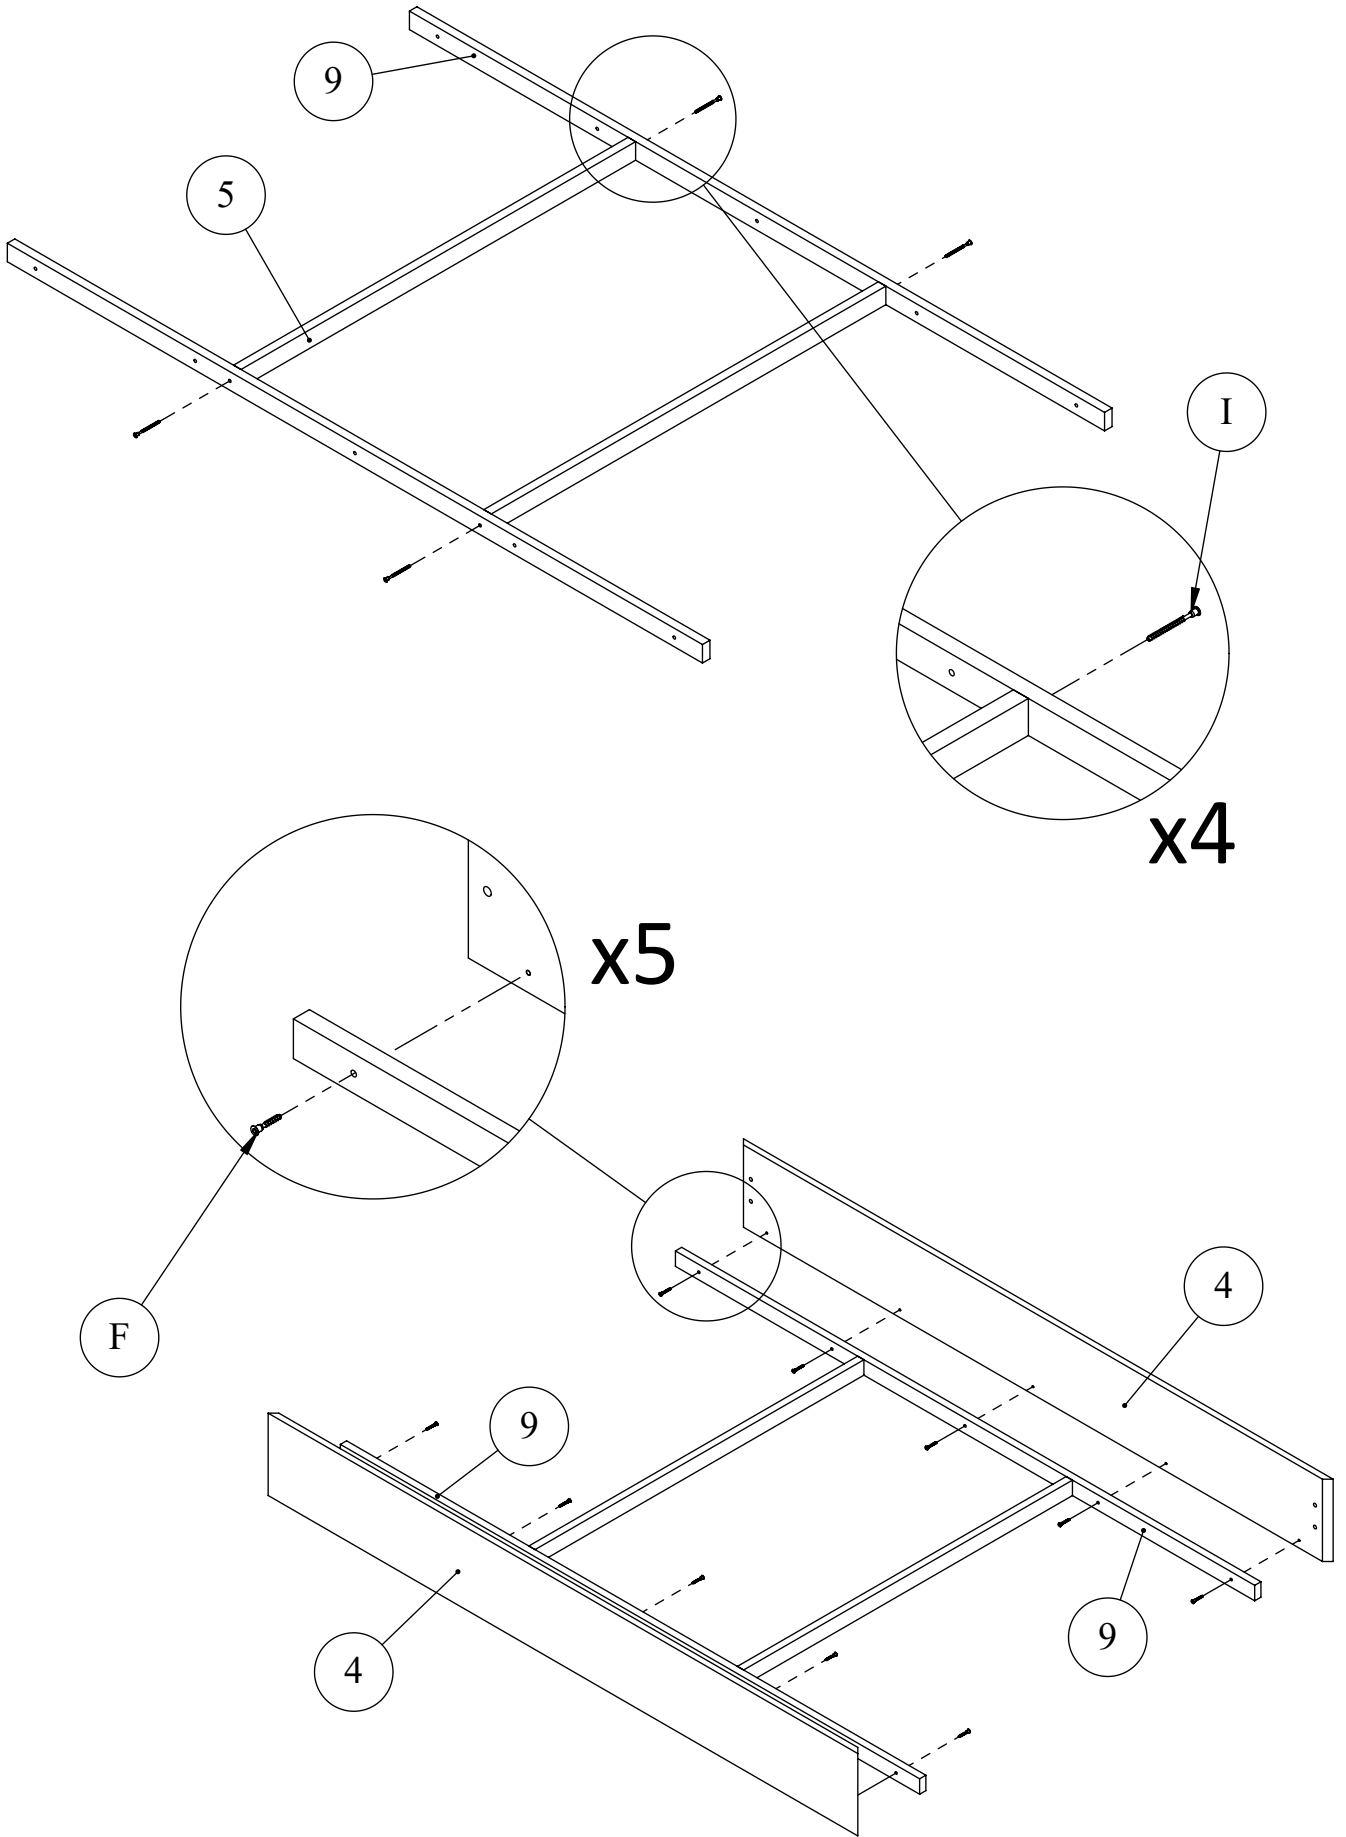


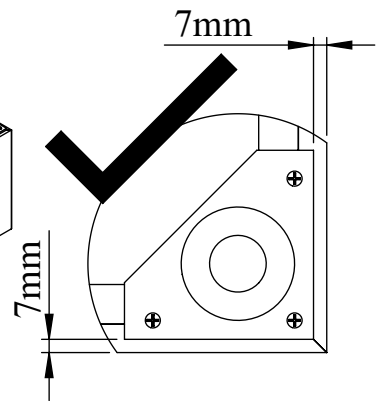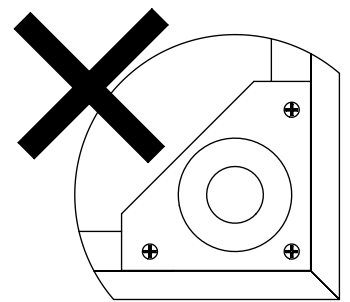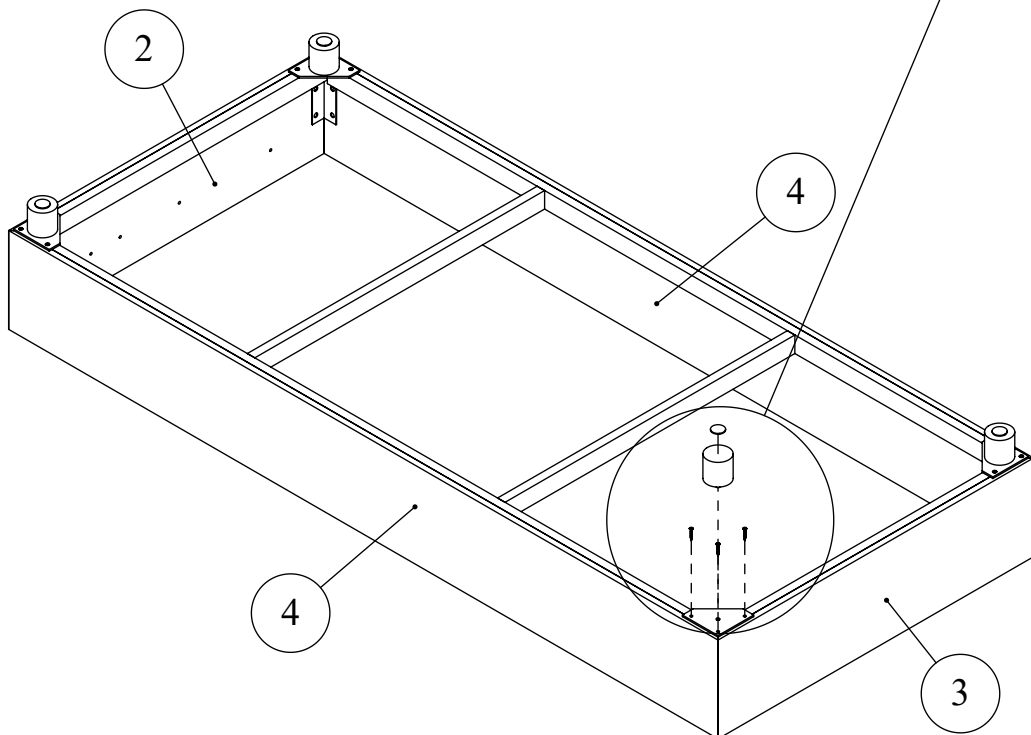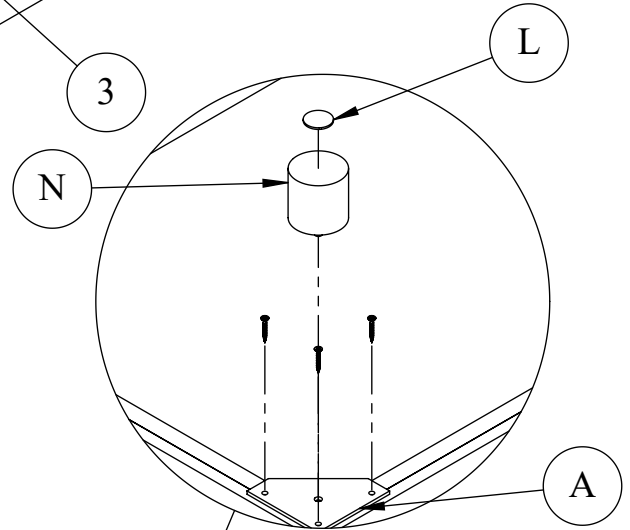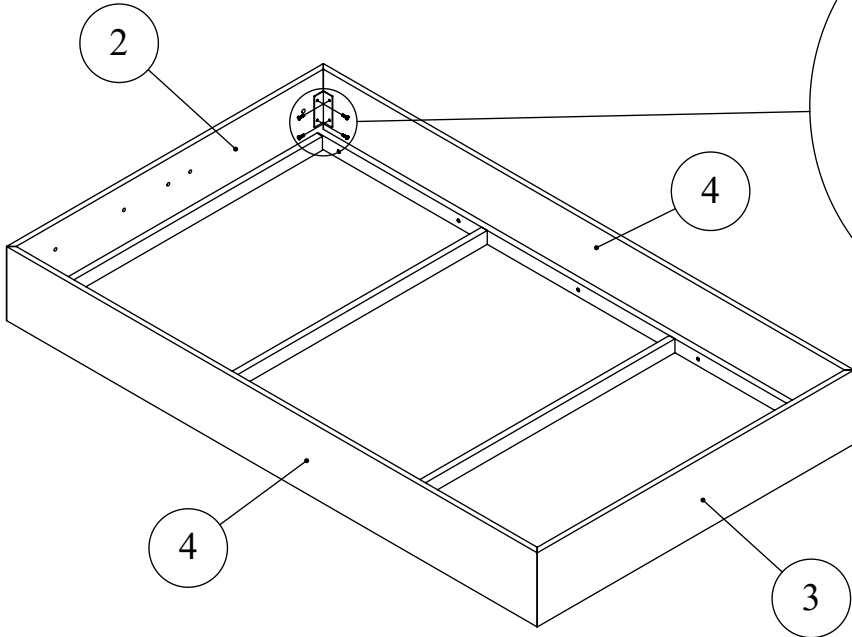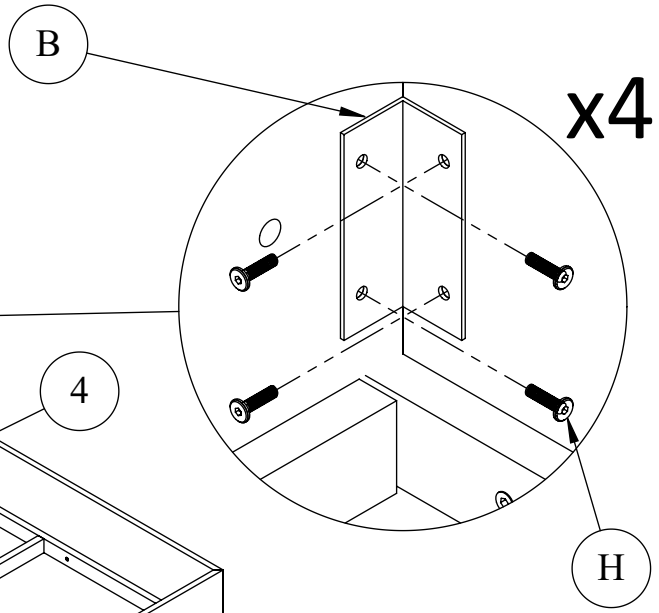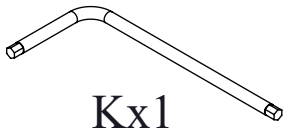

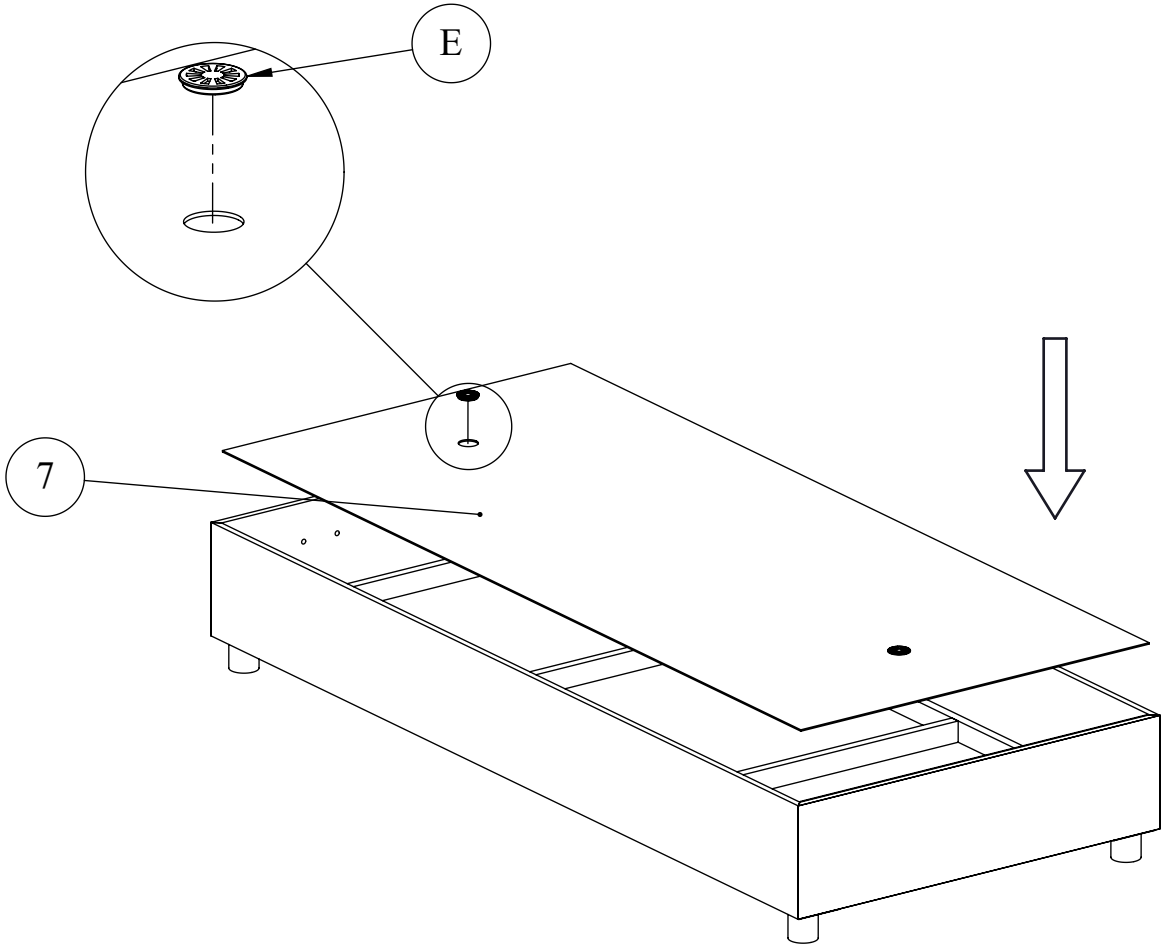

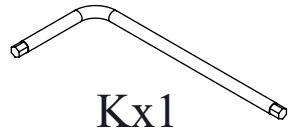


Kx1

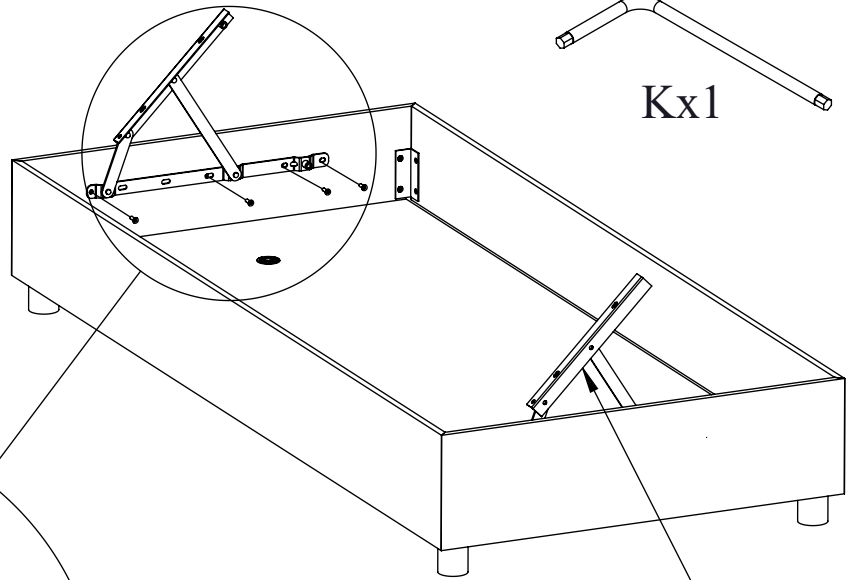

C


D

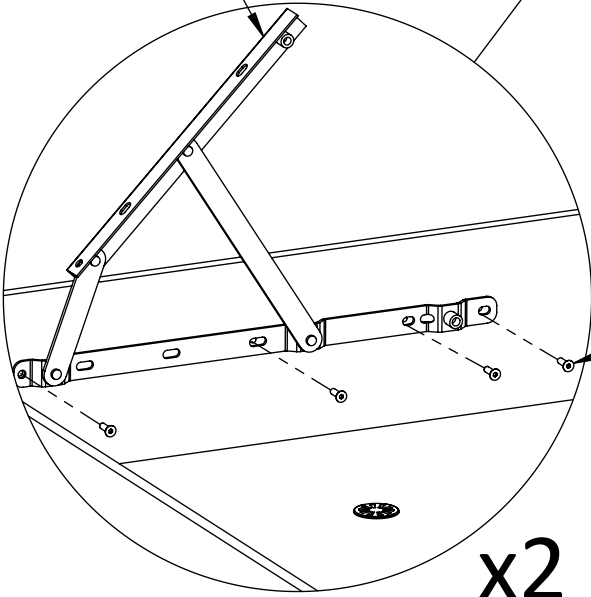


H

H screw all bolts 50%

x2




Jx1

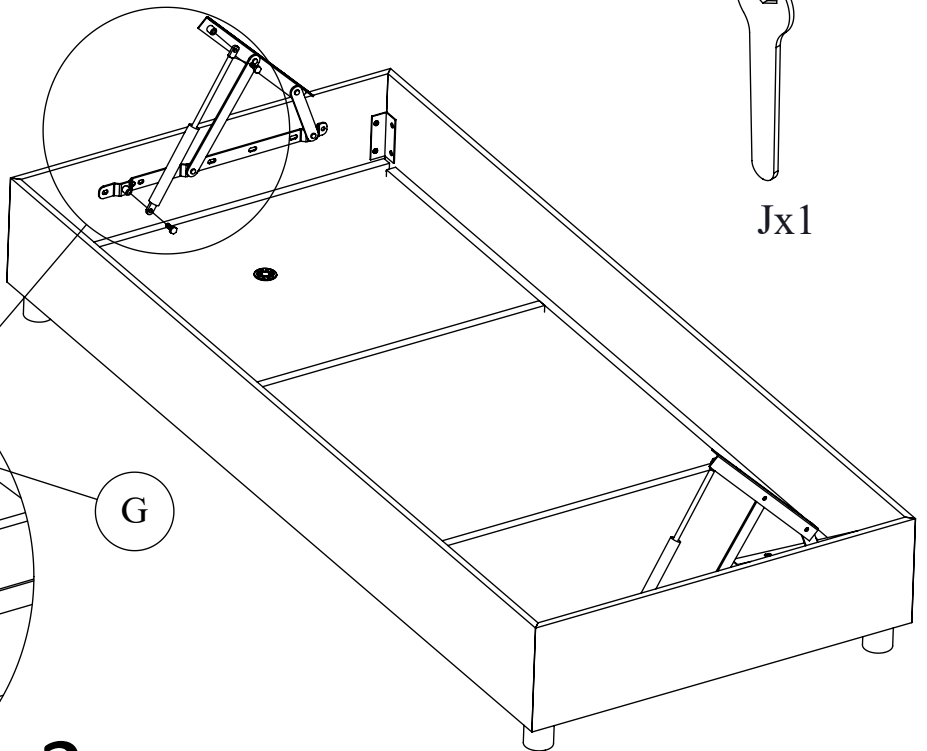

M

G

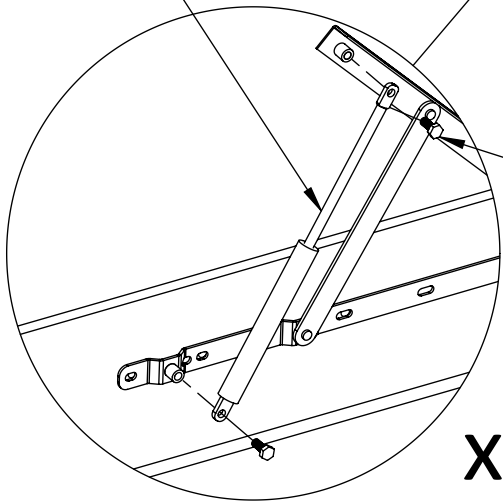

x2

